

Korg SYSEX Messages

Note: This is a growing file. I will be making additions to it from time to time.

Trinity SYSEX:

Change Modes F0,42,30,3B,4E,XX,00,F7

XX Values:

00 Combi 01 Edit Combi 02 Program
03 Edit Program 04 Sequencer or Multi 05 Global
06 Disk

Triton SYSEX:

Change Modes F0,42,30,50,4E,XX,F7

XX Values:

00 Combi 01 Edit Combi 02 Program
03 Edit Program 04 Sequencer/Multi 05 Demo
06 Sampling 07 Global 08 Disk

KARMA SYSEX:

Change Modes F0,42,30,5D,4E,XX,F7

XX Values:

00 Combi 01 Edit Combi 02 Program 03 Edit Program 04 Sequencer
05 S. Play 07 Global 08 Disk Mode

Steve Knowles

Product Support, Korg Canada