

» [Forums Archive](#) » [Home](#) » [Air con](#) » Fujitsu AOTG54LATL unlock Economy Mode

BladeRnR10 I'm new here, please be nice

Hi,

O.P.

We had a Fujitsu Inverter outdoor/indoor controller model installed about 5 months ago. The manual suggests if you hold down the ECONOMY button you can change where the temperature is read (In the roof controller or @ the keypad). This function is LOCKED at the factory and it suggests it can only be unlocked by an authorised dealer.

With a bit of research I found this post/procedure which ultimately does not work (Likely because of a model difference):

"As standard you cannot change it using the controller you may find it flashes up with a key wich means the feature is locked. You need to unlock it using program function number 42. To do this turn the unit off at the controller then hold down both set temp buttons and the fan speed button for a few seconds. Now use the set time buttons to select program 42, you will probably see 00 next to it on the display now use the set temp buttons to select 01. Then hold down the set button untill the 01 stops flashing and you should hear the unit beep. Hold down the two set temp buttons and the fan again to exit function setting mode. You can now change where it picks up the temp by holding the economy button"

I managed to get right up to the "Then hold down the set button..." of which there is no specific "Set button" on my keypad. However, I can get into "Program 42", Select "01" and get back out of programming mode. I can get the "01" to not flash using the "Timer Set" button but the unit does not beep a confirmation.

Does anyone know how to unlock ECONOMY Mode in this unit?

Regards

Blade

ref:

posted 2013-May-15, 6:19 pm AEST

That procedure is pretty much right to unlock the "thermo" select. Do not hold "Timer set" down though, it only needs to be pressed once. Reset power for a minute after changing functions, otherwise the change will not take effect. When power is restored, hold the "thermo" button for a second to toggle the sensing point. Icon = wall controller, no icon = return air.

Although the function changing procedures are quite simple, I would recommend getting the installer or a technician to do it. If another function is changed unknowingly, it can cause the system to perform differently (which is why the procedure is not in the operating manual).

ref:

posted 2013-May-20, 4:51 pm AEST