


REMOTE CONTROLLER (WIRED TYPE)

INSTALLATION MANUAL

For authorized service personnel only.

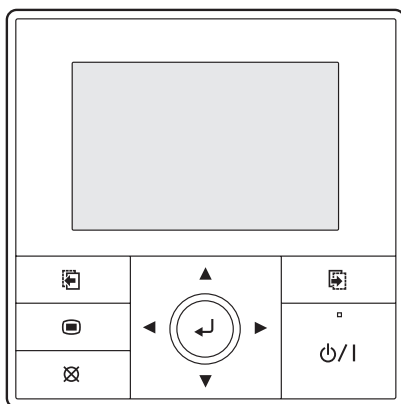

INSTALLATION MANUAL

PART No. 9380222071-02

REMOTE CONTROLLER (WIRED TYPE)

Contents

1. SAFETY PRECAUTIONS.....	1
2. ACCESSORIES.....	2
3. ELECTRICAL REQUIREMENT.....	2
4. SELECTING AN INSTALLATION LOCATION	
4.1. Dimensions.....	2
4.2. Name of parts.....	2
5. INSTALLING THE REMOTE CONTROLLER	
5.1. Wiring.....	3
5.2. Connection of remote controller cable.....	3
5.3. Installation.....	3
6. INSTALLATION METHODS	
6.1. Installation methods without zone control.....	6
6.2. Installation methods with zone control.....	6
7. TURNING ON THE POWER.....	6
8. INITIAL SETTING	
8.1. Initial setting without zone control.....	7
8.2. Initial setting with zone control.....	7
9. SERVICE SCREEN SETTING	
9.1. Test run.....	8
9.2. Function setting.....	9
9.3. Error history.....	9
9.4. I.U. address verification.....	9
9.5. Version.....	9
9.6. Zone initial setting.....	10
10. SETTING THE ROOM TEMPERATURE DETECTION LOCATION	
10.1. Without zone control.....	12
10.2. With zone control.....	12
11. MANAGEMENT FUNCTION	
11.1. Password setting.....	13
11.2. Management setting.....	14
12. OTHERS	
12.1. Error code.....	15

- Depending on the configuration and the setup of your air-conditioning system, some contents shown in the screen illustrations in this manual may differ to the actual screen display you are using.

1. SAFETY PRECAUTIONS

- The "SAFETY PRECAUTIONS" indicated in this manual contain important information pertaining to your safety. Be sure to observe them.
- For details of the operation methods, refer to the operating manual.
- Request the user to keep the manual on hand for future use, such as for relocating or repairing the unit.

WARNING

Indicates a potentially or imminently hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation that may result in minor or moderate injury or damage to property.

WARNING

Installation of this unit must be done by experienced service technicians or professional installers only in accordance with this manual. Installation by nonprofessional or improper installation of the product may cause serious accidents such as injury, water leakage, electric shock, or fire. If the unit is installed in disregard of the instructions in this manual, it will void the manufacturer's warranty.

Do not turn on the power until all installation work is complete. Turning on the power before the work is completed can cause serious accidents such as electric shock or fire.

Installation must be performed in accordance with regulations, codes, or standards for electrical wiring and equipment in each country, region, or the installation place. Improper installation will cause injury, electric shock, or fire.

In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.

Do not install the unit in the following areas:

- Do not install the unit near a source of heat, steam, or flammable gas.
- Area filled with mineral oil or containing a large amount of splashed oil or steam, such as a kitchen. It will deteriorate plastic parts, causing the parts to fall or the unit to leak water.
- Area that generates substances that adversely affect the equipment, such as sulfuric gas, chlorine gas, acid, or alkali. It will cause the copper pipes and brazed joints to corrode, which can cause refrigerant leakage.
- Area containing equipment that generates electromagnetic interference. It will cause the control system to malfunction, preventing the unit from operating normally.
- Area that can cause combustible gas to leak, contains suspended carbon fibers or flammable dust, or volatile inflammables such as paint thinner or gasoline. If gas leaks and settles around the unit, it can cause a fire.
- Install the unit in a well-ventilated place avoiding rains and direct sunlight.

Do not operate this unit when your hands are wet.

Touching the unit with wet hands will cause an electric shock.

If children may approach the unit, take preventive measures so that they cannot reach the unit.

CAUTION

Do not touch the remote controller PC board and PC board parts directly with your hands.

Do not wire the remote controller cable and the bus wire together with or parallel to the connection cables, transmission cables, and power supply cables of the indoor and outdoor units. It may cause erroneous operation.

When installing the bus wire near a source of electromagnetic waves, use shielded wire.

Do not set the DIP switches, either on the air conditioner or the remote controller, in any way other than indicated in this manual or the manual that is supplied with the air conditioner. Doing so may result in an improper operation.

Do not touch the switches with sharp objects. Doing so will cause injury, trouble, or electric shock.

Do not expose this unit directly to water. Doing so will cause trouble, electric shock, or heating.

Do not set vessels containing a liquid on this unit. Doing so will cause heating, fire, or electric shock.

Dispose of the packing materials safely. Tear and dispose of the plastic packing bags so that children cannot play with them. There is the danger of suffocation if children play with the original plastic bags.

2. ACCESSORIES

The following installation parts are supplied. Use them as required.

Name and Shape	Q'ty	Application
Screw (M4 × 16 mm) 	2	For installing the remote controller
Cable tie (medium) 	1	For fixing the remote controller cable
Cable tie (small) 	1	For fixing the remote controller cable
Tube 	1	To protect wiring
Screw (M4 × 14 mm) 	1	For installing the remote controller cable to the indoor unit
Cable clammer 	1	For installing the remote controller cable to the indoor unit

3. ELECTRICAL REQUIREMENT

When connecting the remote controller, use cable specified as follows:


	Conductor size	Type	Remarks
Remote controller cable	0.33 mm ² (22AWG)	Polar 3 core	Use shield cable in accordance with local rules for cable.

4. SELECTING AN INSTALLATION LOCATION

CAUTION


When detecting the room temperature using the remote controller, please set up the remote controller according to the following conditions. If the remote controller is not well set, the correct room temperature will not be detected, and thus the abnormal conditions like "not cooling" or "not heating" will occur even if the air-conditioner is running normally.

 - Locate where is not be affected by inflow of outside air such as caused by opening and closing a door.
- Locate where an average temperature for the room being air-conditioned will be sensed.
- Do not locate directly exposed to the outlet air from the air conditioner.
- Locate out of direct sunlight.
- Locate away from the influence of other heat sources.



Temperature sensor


4.1. Dimensions

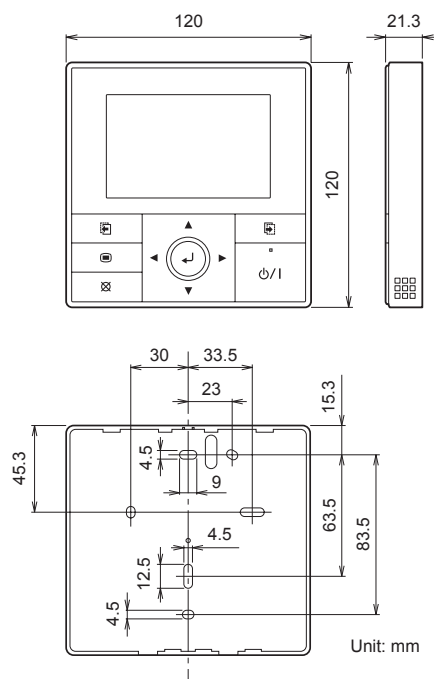

4.2. Name of parts

CAUTION

Press the button lightly with a finger. It may cause a failure if pressed with excessive force.

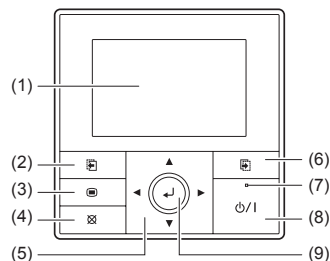

- | | |
|------------------------------------|----------------------------------|
| (1) Display panel (with backlight) | (6) Screen switch button (Right) |
| (2) Screen switch button (Left) | (7) Power indicator |
| (3) Menu button | (8) On/Off button |
| (4) Cancel button | (9) Enter button |
| (5) Cursor button | |

-Note-

While the backlight is off by the automatic light-off, the first button operation does not work, and the backlight illuminates. (The On/Off button is excluded.)

While the backlight is set to [Off], it is effective from the first button operation.

5. INSTALLING THE REMOTE CONTROLLER

5.1. Wiring

⚠ WARNING

Before starting installation work, turn off the power of the connection destination. Do not turn on the power again until installation is completed. Otherwise, it will cause electric shock or fire.

Use the accessories or specified connection cables.
Do not modify connection cables other than those specified, do not use extension cords, and do not use independent branch wiring. The allowable current will be exceeded and cause electric shock or fire.

Install the connection cables securely to the terminal block. Confirm that external force is not applied to the wire. Use connection cables made of the specified wire. If intermediate connection or insertion fixing are imperfect, it will cause electric shock, fire, etc.

Do not connect functional earthing to a telephone functional earthing, water pipe, or conductor rod.

Always fasten the outside covering of the connection cable with the cable clamp. (If the insulator is chafed, electric leakage may occur.)

When performing cable wiring work, be sure that it does not touch the user. Doing so will cause injury or electric shock.

If any cable is damaged, do not repair or modify it yourself. Improper work will cause electric shock or fire.

⚠ CAUTION

Do not parallel to the remote controller cables, indoor and outdoor connection cable, and power supply cables. It may cause erroneous operation.

When performing wiring work, be careful not to damage the cable or injure yourself. Also, connect the connectors securely. Loose connectors will cause trouble, heating, fire, or electric shock.

Install the remote control cable 1 m away from television and radio to avoid distorted images and noise.

Perform wiring so that water does not enter this unit along the external wiring. Always install a trap to the wiring or take other countermeasures. Otherwise it will cause trouble or electric shock or fire.

Confirm the name of each unit and name of each terminal block of the unit and connect the wiring in accordance with the directions given in the manual so that there is no incorrect wiring. Incorrect wiring will damage the electric parts and cause smoke and fire.



When installing the connection cable near a source of electromagnetic waves, use shielded cable. Otherwise, a breakdown or malfunction could result.

5.2. Connection of remote controller cable

To connect the remote controller cable to the indoor unit, connect to the exclusive terminal block of the indoor unit. Modify the remote controller cable as per the following description.

Connecting to the exclusive terminal block

Connect the end of remote controller cable directly to the exclusive terminal block.

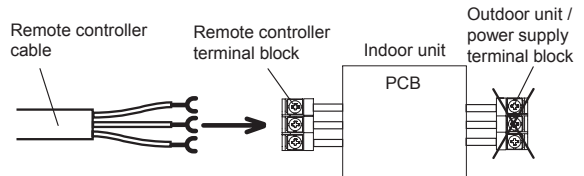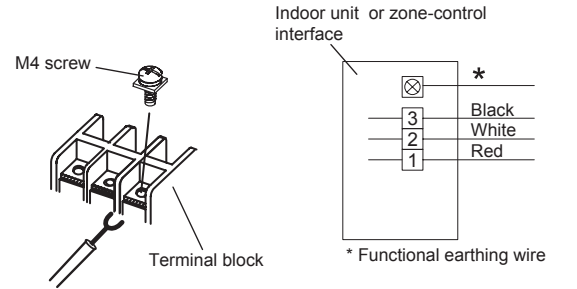

It may be failed if it is connected to the outdoor unit or the terminal block for power supply.

5.3. Installation

⚠ WARNING

When installing this unit, make sure that there are no children nearby. Otherwise, injury or electric shock could result.

⚠ CAUTION

Before opening the case of this unit, completely discharge static electricity charged on your body. Not doing so will cause trouble.

Do not touch the circuit board and circuit board parts directly with your hands. Otherwise, injury or electric shock could result.

Be careful so that the front case does not fall after the front case are removed. Otherwise, a damage of the front case could result.

To avoid incoming water or insects along the cable, always establish a trap and seal the wiring hole.


Overtighten of the screws may cause a distortion or a damage of the rear case.

Do not make any additional hole on the rear case to avoid a damage.

Do not use any other screws than the included ones. Using of other screws may cause a product malfunction or damage.

5.3.1 Installation space


- This product cannot be installed in wall.
- Recommended installation height of the remote controller is 1.4 m (from the floor surface to the bottom of the remote controller).
- Even when you install the remote controller to a switch box and the surface of a wall, secure the space shown in following figure. If spaces run short, it will become difficult to remove the remote controller.

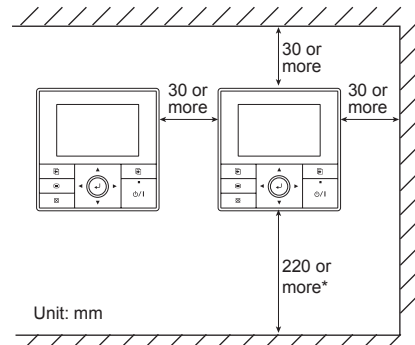

* Please secure enough space where a flat screwdriver to take off the case can be inserted.


5.3.2 Processing of the remote controller cable

- (1) Strip off the coating of remote controller cable 150 mm as follows.
- (2) Put the wires other than the functional earthing wire through the Tube.
- (3) Fix the near end of the Tube with the cable tie (medium) firmly.
 - Do not fix the functional earthing wire with the cable tie (medium).

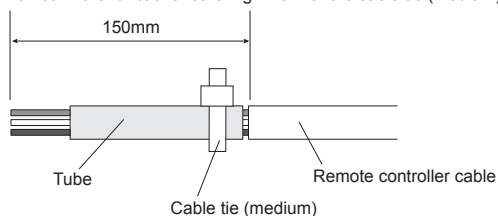


- (4) Cut the wires as shown below.

- Strip off the coating of wires of the remote controller cable as follows.

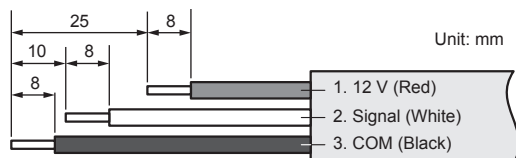


- (5) Connect the functional earthing wire of remote controller and the remote controller cable, and perform the insulation.

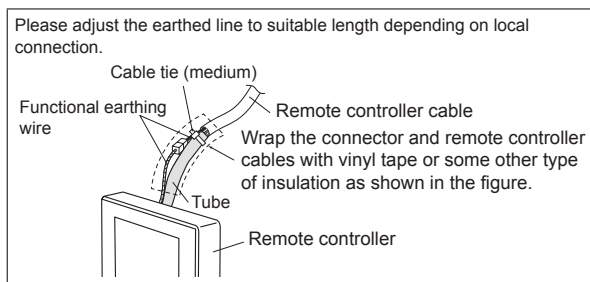

5.3.3 Remove the front case


- (1) Insert the flat screwdriver and remove the front case and rear case by twisting it slightly.

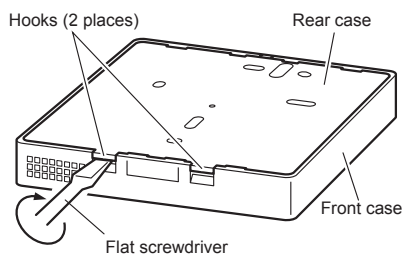

5.3.4 Installing the remote controller


A. When attaching to switch box:

- (1) Seal the wiring hole of the remote controller cable.
- (2) Put a remote controller cable through the hole of the rear case.
- (3) Fix the rear case by securing it with attached screws (2 places).

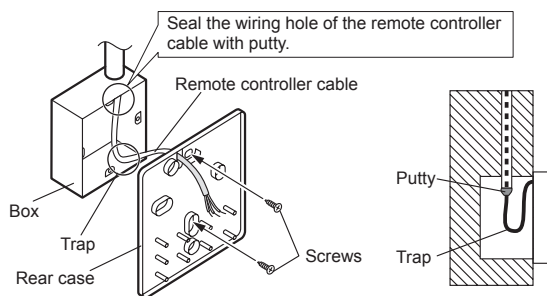


B. When attaching to the wall directly:

- (1) Seal the wiring hole of the remote controller cable.
- (2) Put a remote controller cable through the back hole of the rear case of the main body.
- (3) Fix the rear case by securing it with attached screws (2 places).

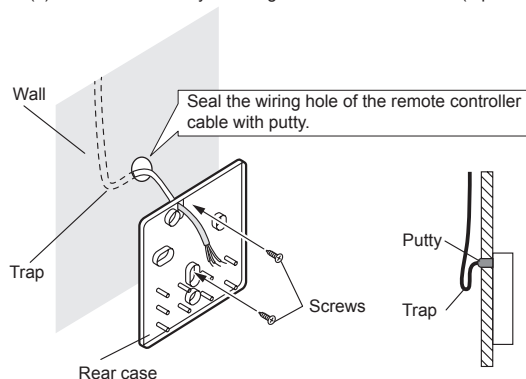


C. When routing the cable on-wall:

- (1) Cut off the cable guide of the front case with using a knife or a nipper.
- (2) Deburr the edge of the cable guide.

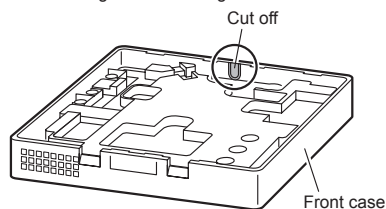


- (3) Fix the rear case by securing it with attached screws (2 places).

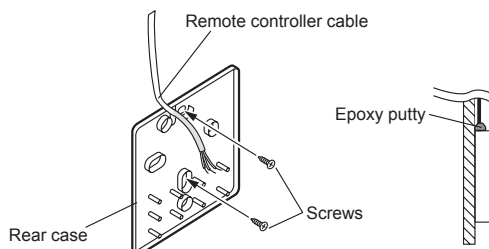


5.3.5 Connect the cable to the terminals

Tightening torque	
Terminal screw	0.8 to 1.2N • m (8 to 12 kgf • cm)

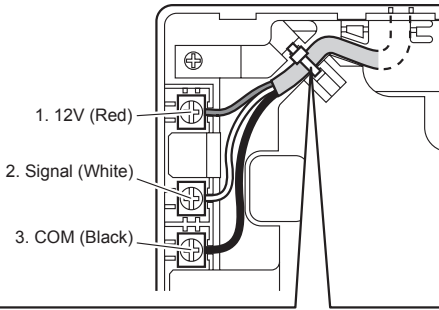

To avoid an excessive tension or pressure to the terminal block, fix the remote controller cable with the cable tie (small) properly. Cut off the excess tip of the cable tie (small).

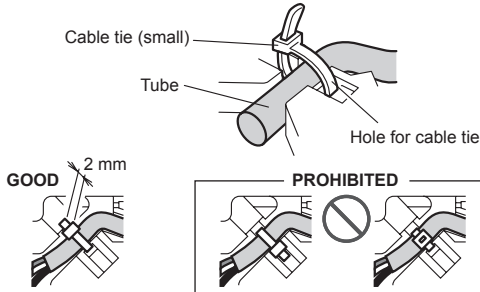

CAUTION

Be careful to avoid breaking the cable by over-tightening the cable tie.
When connecting the remote controller cables, do not over-tighten the screws.

5.3.6 Setting the DIP switch

CAUTION

Do not set the DIP switch of this unit except as specified in this installation manual or the operating manual supplied with the air conditioner. Please set DIP switch according to designation.


Use an insulated screwdriver to set the DIP switches.

Set SW1 on the DIP switch to ON to enable the memory backup of the settings information.

• Memory backup setting

If SW1 of the DIP switch is not set to ON, the settings information will be lost if there is a power failure.

* Registered information, such as that for the internal unit, is not erased even if the DIP switch is turned off.

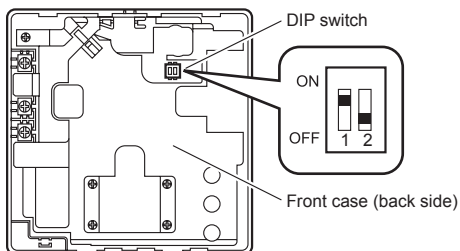


	No.	Switch state		Detail
		OFF	ON	
DIP switch	SW1	★Invalidity	Validity	Memory backup setting * Set to ON to use batteries for the memory backup. If batteries are not used, the settings information stored in memory will be deleted if there is a power failure.
	SW2	★		Dual remote controller setting * Refer to "6.1.2. or 6.2.2. Dual remote controllers".

(★Factory setting)

5.3.7 Attach the front case

- Insert after adjusting upper part of front case.
- When insert the front case, do not pinch the cable.

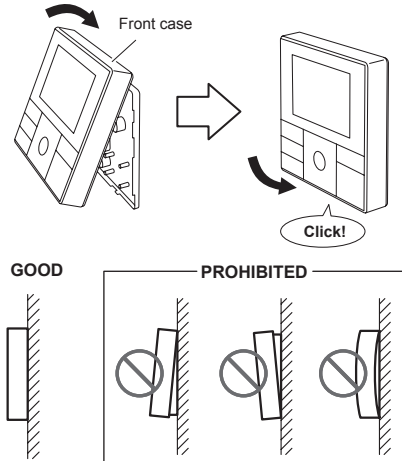


CAUTION

Insert the front case firmly. If improperly attached, it will cause the front case to fall off.

When routing the cable on top of the front case:

Seal the cable guide of the front case of the remote controller cable with an epoxy putty.

- Thickness of sheath of the remote controller cable should be thicker than 1 mm or more. Or insulate it with a cable cover thicker than 1 mm or more.

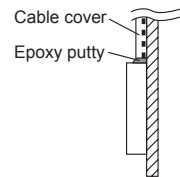

6. INSTALLATION METHODS


6.1. Installation methods without zone control

6.1.1 Group control

- A number of indoor units can be operated at the same time using a single remote controller.
- Depending on the model, some indoor units cannot be connected for group control. (Group control is available for the duct type, the cassette type, and the ceiling type indoor unit.)
- Some functions may become unusable, depending on the combination of the indoor units that are connected in a group.

(1) Wiring method (indoor unit to remote controller)

EXAMPLE: Single Type

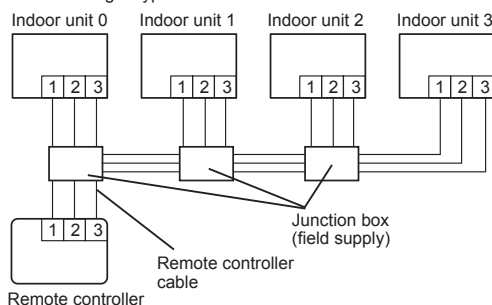


(2) Indoor unit address setting

Set each indoor unit address using the DIP switch of each indoor unit. (Refer to the installation manual for the indoor unit.)

6.1.2 Dual remote controllers

- Field setting can be performed only on the primary unit.
- Assignment of primary unit and secondary unit is necessary. No assignment will cause an error.
- Depending on the model, some indoor units cannot be connected for dual remote controllers. (Dual remote controllers are available for the duct type, the cassette type and the ceiling type indoor unit.)
- Two separate remote controllers can be used to operate the indoor units.
- The timer and functions cannot be used on the secondary units. (For the details, refer to the operating manual.)

(1) Wiring method (indoor unit to remote controller)

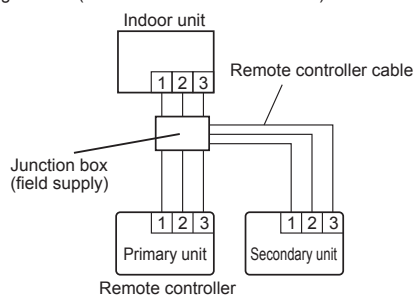

(2) Remote controller DIP switch setting

Set SW2 of the remote controller DIP switch according to the following table.


Number of remote controllers	Primary unit	Secondary unit
	SW2	SW2
1 (Normal)	OFF	—
2 (Dual)	OFF	ON

6.2. Installation methods with zone control

Installing zone-control-interface enables zone control system.


6.2.1 Single remote controller

(1) Wiring method (zone-control-interface to remote controller)

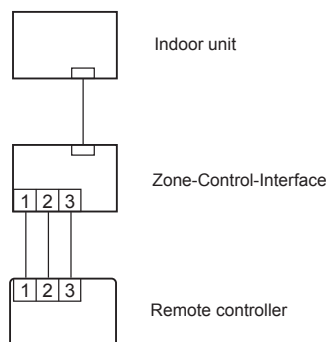

6.2.2 Dual remote controllers

(1) Wiring method (zone-control-interface to remote controller)

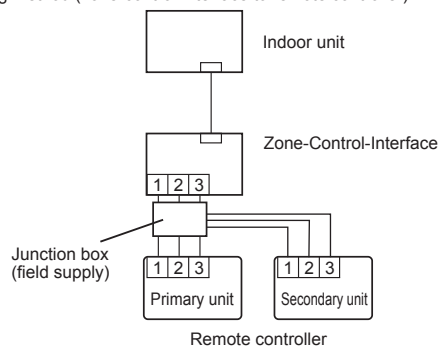

(2) Remote controller DIP switch setting

Set SW2 of the remote controller DIP switch according to the following table.

Number of remote controllers	Primary unit	Secondary unit
	SW2	SW2
1 (Normal)	OFF	—
2 (Dual)	OFF	ON

7. TURNING ON THE POWER

⚠ CAUTION

Recheck the wiring. Incorrect wiring will cause trouble.


- Check the remote controller wiring and DIP switch settings.
- Install the front case.
(See 5. INSTALLING THE REMOTE CONTROLLER).
- Check the indoor unit, outdoor unit, and zone-control-interface wiring and circuit board switch settings, and then turn on the indoor and outdoor units. After message "Please wait" is displayed on the remote controller display, "Language" screen is displayed. In zone-controlled system, "Number of outlets" screen is displayed.

8. INITIAL SETTING

8.1. Initial setting without zone control


When "Language" screen is displayed, perform the initial setting as in the following procedure:

- 1 Select a language with the [Cursor button] on the "Language" screen displayed when the start-up is completed.

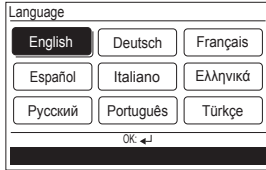


When confirmed by pressing the [Enter button], the "Temp. unit" screen is displayed.

- 2 Switch the unit for temperature "°C" or "°F" with [Cursor button (Up/Down)].
When [Cancel button] is pressed, it returns to the "Language" screen.

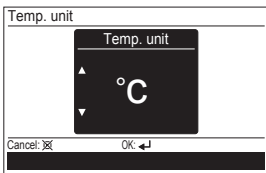

(Temp. unit : Temperature unit)
When [Enter button] is pressed, the "Change display format" screen is displayed.

- 3 Set the display format of "Date format" and "Time format".
Switch the setting item with [Cursor button (Left/Right)] and confirm with the [Cursor button (Up/Down)].
When [Cancel button] is pressed, it returns to the "Temp. unit" screen.

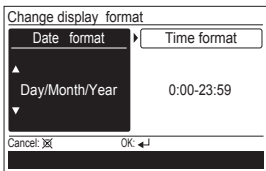


-Note-

Following display formats are available for setting.

Date format :	Time format:
• Day/Month/Year	• 0:00-23:59
• Month/Day/Year	• 0:00-11:59 AM/PM
• Year/Month/Day	• 12:00-11:59 AM/PM


When [Enter button] is pressed, the "Date" screen is displayed.

- 4 Set the "Day", "Month", and "Year".
Switch the setting item with [Cursor button (Left/Right)], and adjust with [Cursor button (Up/Down)].
When [Cancel button] is pressed, it returns to the "Change display format" screen.

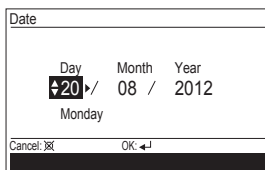


When [Enter button] is pressed, the "Time" screen is displayed.

- 5 Set the "hour" and "min".
Switch the setting item by [Cursor button (Left/Right)], and adjust with [Cursor button (Up/Down)].
"Min" can be set quickly if the button is pressed continuously.
When [Cancel button] is pressed, it returns to the "Date" screen.

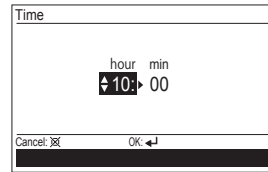

When [Enter button] is pressed, the "Confirmation" screen is displayed.

- 6 When setting is completed, select "Yes" with [Cursor button (Left/Right)], and press [Enter button].
When correcting a setting, set it again as it returns to the "Language" screen when "No" is selected and press [Enter button].

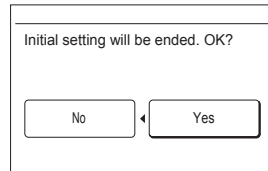


8.2. Initial setting with zone control

When "Number of outlets" screen is displayed, perform the initial setting as in the following procedure.


- When you perform the initial setting of the secondary remote controller, skip following step 1 to step 2.

- 1 Set the number of outlets.

EXAMPLE: When you install the dampers and outlets as shown in Fig. 1, set the number of outlets as shown in Fig. 2.

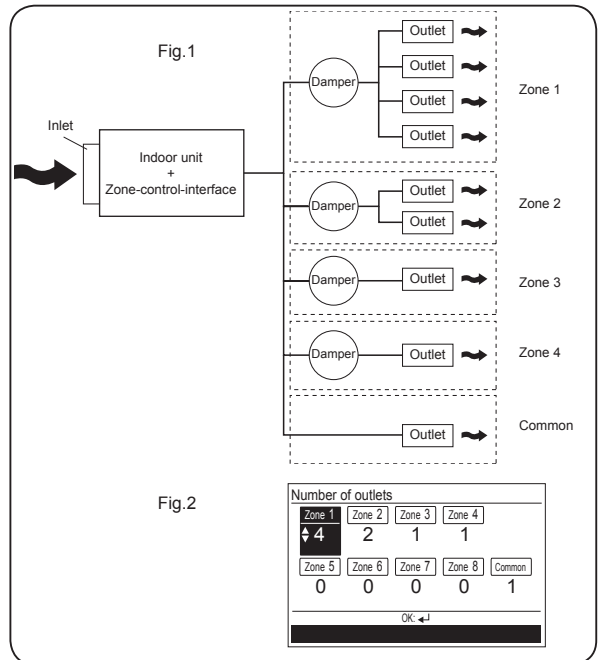

Switch the setting item with [Cursor button (Left/Right)] and set the number of outlets with [Cursor button (Up/Down)].

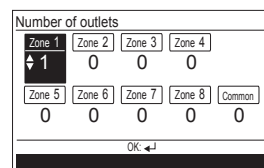


When confirmed by pressing the [Enter button], the "Damper type setting" screen is displayed.

-Note-

- Not the all the setting value cannot be set to "0".

- Set whether to use a spring return damper. Switch "Not in use" or "In use" with [Cursor button (Up/Down)]. When [Cancel button] is pressed, it returns to the "Number of outlets" screen.

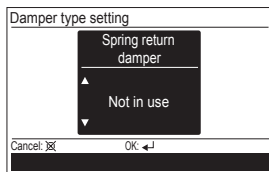


When [Enter button] is pressed, the "Change display format" screen is displayed.

-Note-

- If this setting is changed to "In use", "Operation will commence in a minute." is displayed on the screen when turning on the power.

- Set the display format of "Date format" and "Time format". Switch the setting item with [Cursor button (Left/Right)] and confirm with the [Cursor button (Up/Down)]. When [Cancel button] is pressed, it returns to the "Damper type setting" screen.

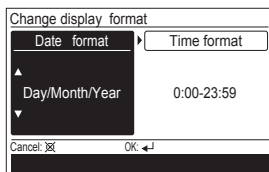


-Note-

Following display formats are available for setting.

Date format :	Time format:
• Day/Month/Year	• 0:00-23:59
• Month/Day/Year	• 0:00-11:59 AM/PM
• Year/Month/Day	• 12:00-11:59 AM/PM


When [Enter button] is pressed, the "Date" screen is displayed.

- Set the "Day", "Month", and "Year". Switch the setting item with [Cursor button (Left/Right)], and adjust with [Cursor button (Up/Down)]. When [Cancel button] is pressed, it returns to the "Change display format" screen.

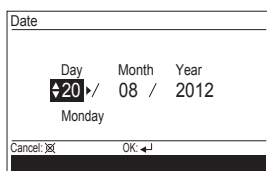


When [Enter button] is pressed, the "Time" screen is displayed.

- Set the "hour" and "min". Switch the setting item by [Cursor button (Left/Right)], and adjust with [Cursor button (Up/Down)]. "Min" can be set quickly if the button is pressed continuously. When [Cancel button] is pressed, it returns to the "Date" screen.

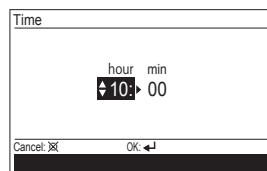

When [Enter button] is pressed, the "Confirmation" screen is displayed.

- When setting is completed, select "Yes" with [Cursor button (Left/Right)], and press [Enter button]. When correcting a setting, set it again as it returns to the "Number of outlets" screen when "No" is selected and press [Enter button].


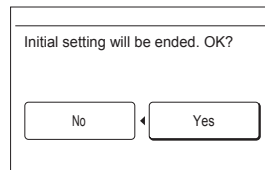


9. SERVICE SCREEN SETTING

When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen.

If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to "Service" screen.

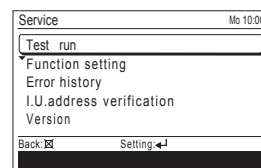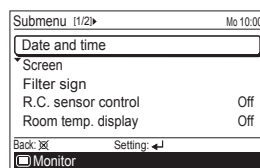

(R.C. Sensor control : Remote Controller sensor control)
(I.U. address verification : Indoor Unit address verification)

Service screen


Function name	Setting	
	Primary unit	Secondary unit
Test run	○	○
Function setting	○	×
Error history	○	×
I.U. address verification	○	×
Version	○	○
Zone initial setting*	○	×

*Dedicated functions for zone-controlled system.


9.1. Test run

- If the unit is operating, turn it off.
- Test run stops in 60 minutes. When the [On/Off button] is pressed during the test run, the test run will be canceled.
- After completing the test run, wait enough until starting the operation.

- When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen. If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

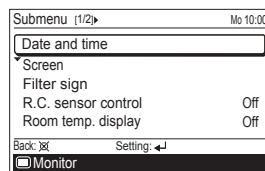


- Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to "Service" screen.

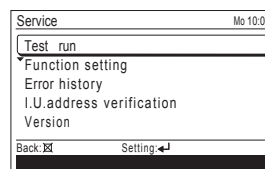

When you select [Test run] with the [Cursor button (Up/Down)] and press the [Enter button], following confirmation screen is displayed.

To start the test run, select "Yes" with the [Cursor button (Left/Right)], and press the [Enter button].

In Set temp., test run is displayed.

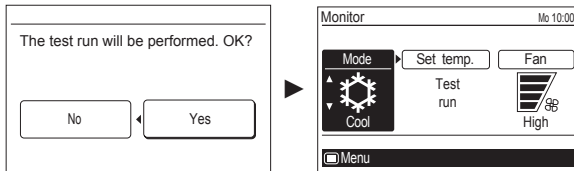


9.2. Function setting

This procedure changes the function settings used to control the indoor unit according to the installation conditions. Incorrect settings can cause the indoor unit to malfunction. This procedure should be performed by authorized installation or service personnel only.


Perform the "Function setting" according to the installation conditions using the remote controller. (Refer to the indoor unit installation manual for details on the function numbers and setting values.)

Perform the setting during the operation is stopped.


- 1 When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen. If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

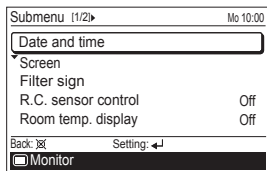


- 2 Press the [Screen switch button (Left)] and [Screen switch button (Right)] simultaneously for 5 seconds to switch to "Service" screen.

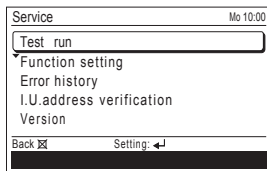


- 3 Select [Function setting] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

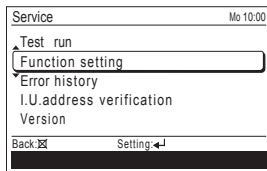


- 4 Select [R.C. address] of the target indoor unit with pressing the [Cursor button (Up/Down)].
(R.C. Address : Remote Controller Address)

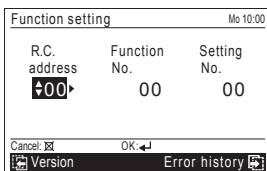

- 5 Select the [Function No.] with pressing the [Cursor button (Left/Right)], and select the Function No. to be set with pressing the [Cursor button (Up/Down)].

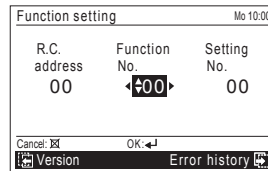

- 6 Select the [Setting No.] with pressing the [Cursor button (Left/Right)], and select the Setting No. to be set with pressing the [Cursor button (Up/Down)], and press the [Enter button].

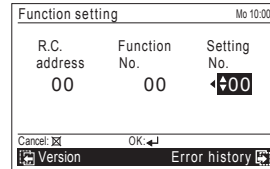



-Note-

"Service" screen or "Function setting" screen returns to the "Submenu" screen if there is no button operation for 1 minute.

9.3. Error history

The error history can be displayed.



Select [Error history] with the [Cursor button (Up/Down)], and press the [Enter button].

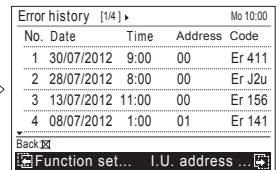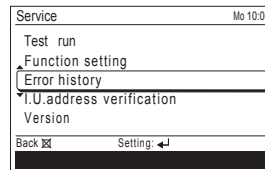

9.4. I.U. address verification

The refrigerant address and the indoor unit address can be displayed.



Select [I.U. address verification] with the [Cursor button (Up/Down)], and press the [Enter button].

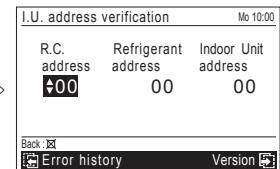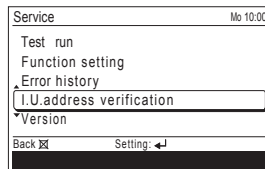

9.5. Version

Software version of the remote controller can be displayed.

Select [Version] with the [Cursor button (Up/Down)], and press the [Enter button].

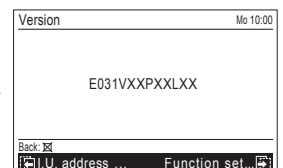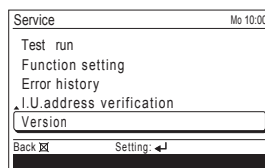

9.6. Zone initial setting


Zone initial setting is a dedicated setting for zone-controlled system. Enable items for zone initial setting are displayed.

This procedure changes the initial settings used to control zone-controlled system according to the installation conditions.

Incorrect settings can cause the indoor unit to malfunction. This procedure should be performed by authorized installation or service personnel only. Perform the "ZONE INITIAL SETTING" according to the installation conditions using the remote controller.

Perform the setting during the operation is stopped.

Select [Zone initial setting] with the [Cursor button (Up/Down)], and press the [Enter button].

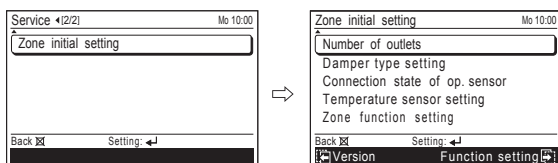

-Note-

- After the setting is completed, it takes some time until all the settings are reflected. Do not turn off the power of the zone-control-interface while "Settings are being confirmed." is displayed on the screen.




After completing the ZONE INITIAL SETTING, be sure to turn off the power and turn it on again.


9.6.1 Number of outlets

Set the number of outlet.

- Select [Number of outlets] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

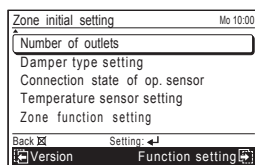

- Switch the setting item with the [Cursor button (Left/Right)], and set the number of outlets with [Cursor button (Up/Down)], and press the [Enter button].

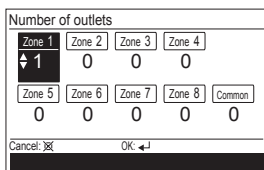


-Note-

- Not all the setting value cannot be set to "0".
- If this setting is changed, the setting in "Zone (single)", "Zone (group)", and "Weekly timer setting" will be updated. Make sure to inform the user to confirm the updated setting.


9.6.2 Damper type setting

Set when you use spring return damper.

- Select [Damper type setting] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

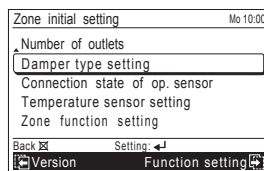


- Switch the damper type "Not in use" or "In use" with [Cursor button (Up/Down)], and press [Enter button].

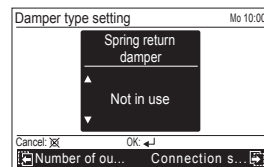

-Note-

- If a spring return damper is installed and this setting is changed to "In use", it takes some time until the air conditioner starts the operation after you press the [On/Off button]. In that case, "Operation will commence in a minute." is displayed on the screen for about 1 minute.

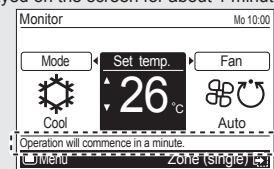


9.6.3 Connection state of op. sensor


Set when you use optional sensor.

For details, refer to "10.2. With zone control."

- Select [Connection state of op. sensor] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

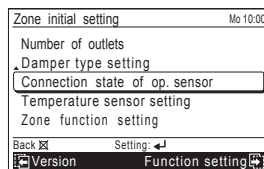

- Switch the setting item with [Cursor button (Left/Right)], and confirm with the [Cursor button (Up/Down)], and press the [Enter button].

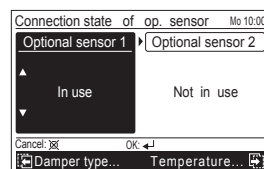


-Note-

- If this setting is changed, the setting in "Zone (single)", "Zone (group)", and "Weekly timer setting" will be updated. Make sure to inform the user to confirm the updated setting.
- For the details of "Optional sensor 1" and "Optional sensor 2", refer to the installation manual of the zone-control-interface.

9.6.4 Temperature sensor setting

Set whether to use temperature sensor of the remote controller.
For details, refer to "10.2. With zone control."


- 1 Select [Temperature sensor setting] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

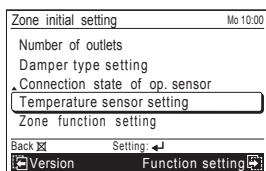


- 2 Screen will differ depending on whether you connect the secondary remote controller or not. Confirm the screen and perform the setting.

- When primary and secondary remote controllers are connected:

Switch the setting item with [Cursor button (Left/Right)], and select "Disable" or "Enable" with the [Cursor button (Up/Down)], and press the [Enter button].

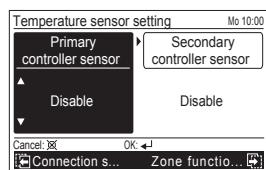

- When only primary remote controller is connected:

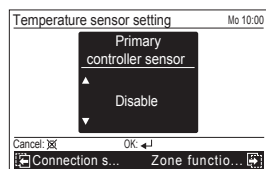


-Note-

- If this setting is changed, the setting in "Zone (single)", "Zone (group)", and "Weekly timer setting" will be updated. Make sure to inform the user to confirm the updated setting.


9.6.5 Zone function setting

Correct temperature of the optional sensor.


- 1 Select [Zone function setting] with pressing the [Cursor button (Up/Down)], and press the [Enter button].

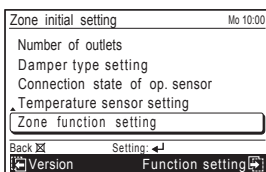

- 2 Select the [Zone function No.] with pressing the [Cursor button (Left/Right)], and select the Zone function No. to be set with pressing the [Cursor button (Up/Down)].

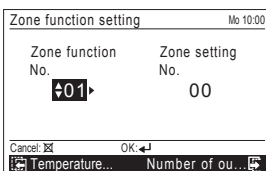

- 3 Select the [Zone setting No.] with pressing the [Cursor button (Left/Right)], and select the Zone setting No. to be set with pressing the [Cursor button (Up/Down)], and press the [Enter button].

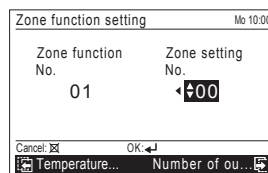

Setting the Cooler Room Temperature Correction for Optional Sensor 1 and 2

- Depending on the installed environment, the room temperature sensor may require a correction. The settings may be selected as shown in the table below.

(★...Factory setting)

Zone Function Number	Zone Setting Number	Setting Description
01: Optional sensor 1 03: Optional sensor 2	00	★ No correction (Standard)
	01	+4.0°C
	02	+3.5°C
	03	+3.0°C
	04	+2.5°C
	05	+2.0°C
	06	+1.5°C
	07	+1.0°C
	08	+0.5°C
	09	-0.5°C
	10	-1.0°C
	11	-1.5°C
	12	-2.0°C
	13	-2.5°C
	14	-3.0°C
	15	-3.5°C
	16	-4.0°C

Setting the Heater Room Temperature Correction for Optional Sensor 1 and 2

- Depending on the installed environment, the room temperature sensor may require a correction. The settings may be selected as shown in the table below.

(★...Factory setting)

Zone Function Number	Zone Setting Number	Setting Description
02: Optional sensor 1 04: Optional sensor 2	00	★ No correction (Standard)
	01	+4.0°C
	02	+3.5°C
	03	+3.0°C
	04	+2.5°C
	05	+2.0°C
	06	+1.5°C
	07	+1.0°C
	08	+0.5°C
	09	-0.5°C
	10	-1.0°C
	11	-1.5°C
	12	-2.0°C
	13	-2.5°C
	14	-3.0°C
	15	-3.5°C
	16	-4.0°C

10. SETTING THE ROOM TEMPERATURE DETECTION LOCATION

10.1. Without zone control


The location of the sensor detecting the room temperature can be selected from the following 2 examples. Choose the best location depending on the installing condition.

Refer to "9.2. Function setting".

A. Indoor unit sensor setting (factory setting)

The room temperature is detected by the indoor unit temperature sensor.

When using this function, the "Room temperature sensor switching (Function number: 42)" is set at "Indoor unit (00)".

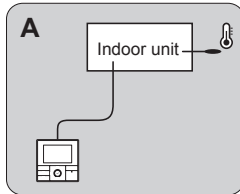


B. Indoor unit/remote controller sensor setting

The temperature sensor of both the indoor unit and the remote controller is used to detect the room temperature.

When using this function, the "Room temperature sensor switching (Function number: 42)" is set at "Both (01)".

- (1) Activate the sensor switching function as described in "Room temperature sensor switching (Function number: 42)."
- (2) Select either the temperature sensor on the indoor unit or the remote controller for detection. (For how to configure the setting, refer to the Operating manual.)

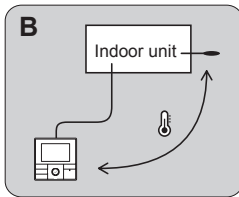

CAUTION

When selecting the "Remote controller setting", if the detected temperature value between the temperature sensor of the indoor unit and the temperature sensor of the remote controller varies significantly, it is likely to return to the control status of temperature sensor of the indoor unit temporarily.

As the temperature sensor of remote controller detects the temperature near the wall, when there is a certain difference between the room temperature and the wall temperature, the sensor will not detect the room temperature correctly sometimes. Especially when the outer side of the wall on which the sensor is positioned is exposed to the open air, it is recommended to use the temperature sensor of the indoor unit to detect the room temperature when the indoor and outdoor temperature difference is significant.

The temperature sensor of the remote controller is not only used when there is a problem in the detection of the temperature sensor of the indoor unit.

1) Room temperature sensor switching

(Only for Wired remote controller)

When using the Wired remote controller temperature sensor, change the setting to "Both" (01).

(★...Factory setting)

Setting Description	Function No.	Setting No.
★ Indoor unit	42	00
Both		01

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

* Remote controller sensor must be turned on by using the remote controller.

2) Setting record

Record the setting change in the following table.

Setting Description	Setting No.
Room temperature sensor switching	

After completing the "Function setting", be sure to turn off the power and turn it on again.

10.2. With zone control


The location of the sensor detecting the room temperature can be selected from the following 2 examples. Choose the best location depending on the installing condition.

Refer to "9.2. Function setting".

A. Indoor unit sensor setting (factory setting)

The room temperature is detected by the indoor unit temperature sensor.

When using this function, the "Room temperature sensor switching (Function number: 42)" is set at "Indoor unit (00)".

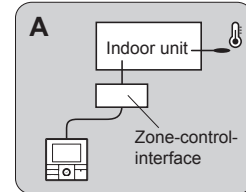


B. Indoor unit/remote controller/optional sensor setting (room temperature sensor selection)

The temperature sensor of the indoor unit, the remote controller, or the optional sensor can be used to detect the room temperature.

When using this function, the "Room temperature sensor switching (Function number: 42)" is set at "Both (01)", and the "Room temperature sensor switching (Aux.) (Function number: 48)" is set at "Wired remote controller (01)".

- (1) Activate the sensor switching function as described in "Room temperature sensor switching (Function number: 42)."
- (2) Select either the temperature sensor on the indoor unit or the remote controller/optional sensor for detection as described in "Room temperature sensor switching (Aux.) (Function number: 48)".
- (3) Set "Connection state of op. sensor" and "Temperature sensor setting", as described in "Connection state of op. sensor and Temperature sensor setting".
- (4) Select any of the temperature sensor on the indoor unit, on the remote controller, or the optional sensor for temperature detection. (For how to configure the setting, refer to the Operating manual.)

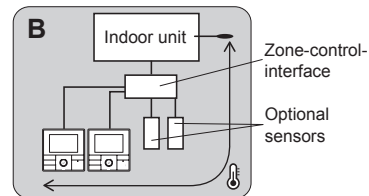

CAUTION

As the temperature sensor of remote controller or optional sensor detects the temperature near the wall, when there is a certain difference between the room temperature and the wall temperature, the sensor will not detect the room temperature correctly sometimes. Especially when the outer side of the wall on which the sensor is positioned is exposed to the open air, it is recommended to use the temperature sensor of the indoor unit to detect the room temperature when the indoor and outdoor temperature difference is significant.

1) Room temperature sensor switching

When using the Wired remote controller/optional sensor temperature sensor, change the setting to "Both" (01).

(★...Factory setting)

Setting Description	Function No.	Setting No.
★ Indoor unit	42	00
Both		01

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller/optional sensor are active.

* Remote controller sensor/optional sensor must be turned on by using the remote controller.

2) Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller/optional sensor only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

(★...Factory setting)

Setting Description	Function No.	Setting No.
★ Both	48	00
Wired remote controller		01

After completing the "Function setting", be sure to turn off the power and turn it on again.

3) Connection state of op. sensor and Temperature sensor setting

The following settings are needed when switching the sensor. Perform the settings in zone initial setting. For the details, refer to "9.6. Zone initial setting".

- Connection state of op. sensor

(★...Factory setting)

Optional sensor 1	Optional sensor 2
★ Not in use	★ Not in use
In use	In use

* Not in use: Optional sensor cannot be used for room temperature sensor.

* In use: Optional sensor can be used for room temperature sensor.

- Temperature sensor setting

(★...Factory setting)

Primary controller sensor	Secondary controller sensor
Disable	Disable
★ Enable	★ Enable

* Disable: Remote controller temperature sensor cannot be used.

* Enable: Remote controller temperature sensor can be used.

4) Setting record

- Record the setting change in the following table.

Setting Description	Setting No.
Room temperature sensor switching	
Room temperature sensor switching (Aux.)	

- Record the connection state of op. sensor in the following table.

Optional sensor	Memo	
Optional sensor 1	Not in use	In use
Optional sensor 2	Not in use	In use

- Record the temperature sensor setting in the following table.

Controller sensor	Memo	
Primary controller sensor	Disable	Enable
Secondary controller sensor	Disable	Enable

11. MANAGEMENT FUNCTION

Restricts the operations of following power-saving functions by non-authorized person, and helps more energy-efficient operation of the system. With the password control, only the administrator can get access to the function setting.

For the controlled functions, perform the setting change in "Management function" screen.

Settings Items:

Function	Timer
• Economy	• On timer
• Set temp. auto return	• Off timer
• Set temp. range	• Weekly timer
	• Auto-off timer

(Set temp. auto return : Set temperature auto return)

(Set temp. range : Set temperature range)

For the details on each function, refer to the operating manual.

11.1. Password setting


Preset value of password is "0000".

Change the password as necessary so that the setting change cannot be done by other than the administrator.


The changed password should be managed properly by the administrator.

The password (4-digit) required when setting up the Management function can be changed.


- When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen. If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

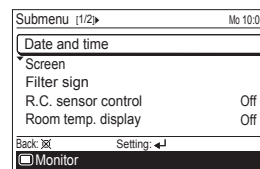


- When [Initial] is selected in [Submenu] screen, "Initial" screen is displayed. Enter current password with the [Cursor button], and press the [Enter button].

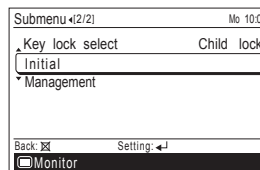

- Select [Password setting (Management)] in the "Initial" screen, and press the [Enter button].

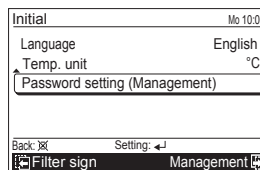

- Enter current password. With pressing the [Cursor button (Up/Down)], enter the number. When you press the [Cursor button (Right)], the cursor moves to next digit. After you enter the 4 digits, press the [Enter button].

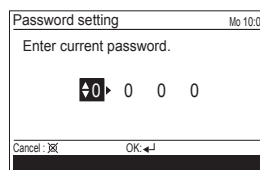

-Note-

When you forget a password, please push a [Menu button] and the [Cancel button] at the same time for 2 seconds. Screen switches to "Enter new password" screen.

- 5 Enter new password with same procedure in step 4.

Mo 10:00

Password setting

Enter new password.

0

0

0

0

Cancel: ⌫

OK: ↵

⇒

Mo 10:00

Initial

Language English

Temp. unit °C

←

Password setting (Management)

→

Back: ⌫

Setting: ↵

Filter sign

Management

11.2. Management setting

Management setting is a function that restricts the operation of some functions on this remote controller. The functions to be restricted are set in this setting, but not in each functional setting.

Example: To restrict Economy setting to [ON]

Set to [ON] on all the other signal source except this remote controller.

1 When [Menu button] is pressed twice while "Monitor" screen is displayed, it switches to the "Submenu" screen. If [Menu button] is pressed while the "Submenu" screen is displayed, the display returns to the "Monitor" screen.

Mo 10:00

Submenu (1/2)

Date and time

Screen

Filter sign

R.C. sensor control

Room temp. display

Off

Off

Back: ⌫

Setting: ↵

Monitor

2 When [Management] is selected in [Submenu] screen, "Management" screen is displayed. Enter current password with the [Cursor button], and press the [Enter button].

Mo 10:00

Submenu (2/2)

Key lock select

Child lock

Initial

Management

Back: ⌫

Setting: ↵

Monitor

⇒

Mo 10:00

Management

Enter current password.

0

0

0

0

Cancel: ⌫

OK: ↵

Initial

Date and time

-Note-

If the entered password is not correct, message "Password is not correct." is displayed. Enter correct password.

3 When correct password is entered, "Management function" screen is displayed. To select the function to be controlled by [Management], select [Edit] with pressing the [Cursor button (Up/Down)], and press the [Enter button]. "Management select" screen is displayed.

Mo 10:00

Management function

Edit

Back: ⌫

Setting: ↵

⇒

Mo 10:00

Management select (1/2)

Economy

Set temp. auto return

Set temp. range

On timer

Off timer

Back: ⌫

Setting: ↵

4 Select the target function with the [Cursor button (Up/Down)] and press the [Enter button]. Then the setting field for the restriction setting is displayed.

Mo 10:00

Management select (1/2)

Economy

Set temp. auto return

Set temp. range

On timer

Off timer

Back: ⌫

Setting: ↵

⇒

Mo 10:00

Management select (1/2)

Economy

Set temp. auto return

Set temp. range

On timer

Off timer

Back: ⌫

OK: ↵

Select the setting with the [Cursor button (Up/Down)], and press the [Enter button].

Mo 10:00

Management select (1/2)

Economy

Set temp. auto return

Set temp. range

On timer

Off timer

Cancel: ⌫

OK: ↵

⇒

Mo 10:00

Management select (1/2)

Economy

Set temp. auto return

Set temp. range

On timer

Off timer

Back: ⌫

Setting: ↵

If there is another setting to be changed, you can continue the configuration.

Mo 10:00

Management select (1/2)

Economy

Set temp. auto return

Set temp. range

On timer

Off timer

Back: ⌫

Setting: ↵

To complete the setting, press the [Cancel button].

Functions marked check in "Management select" screen are listed in "Management function" screen.

Mo 10:00

Management function

Edit

Economy

Set temp. range

On timer

Off

Disable

Disable

Back: ⌫

Setting: ↵

5 In "Management function" screen, you can change the detailed setting on each function. For how change the setting, refer to the operating manual.

Mo 10:00

Management function

Edit

Economy

Set temp. range

On timer

Off

Disable

Disable

Back: ⌫

Setting: ↵

-Note-

If the function you are selecting is restricted by [Management] function, following message is displayed in the operation guidance display. The message is displayed constantly during the management function is enabled.

Back: ⌫

Restricted by the management function


14

12. OTHERS

12.1. Error code

If an error occurs, the power indicator (green) blinks and the following display will be shown.
If "Error" is displayed, immediately stop the air conditioner operation, and consult authorized service personnel.

• When there is an error on this remote controller:

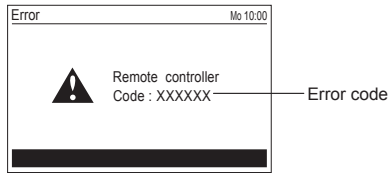


• Without zone control

Error code	Contents
Er 12.1 EE 1c	• Wired remote controller communication error
Er 15.4 EE 1d	• Incompatible indoor unit is connected • Indoor unit date acquisition error • Primary unit / Secondary unit setting error
Er CC.1 EE CC.1	• Remote controller sensor error

• With zone control

Error code	Contents
Er 12.1 EE 1c	• Wired remote controller communication error • Communication error between indoor unit and zone-control-interface • Communication error between zone-control-interface and remote controller • Indoor unit data acquisition error
Er 15.4 EE 1d	• Incompatible indoor unit is connected • Indoor unit date acquisition error • Primary unit / Secondary unit setting error
Er CC.1 EE CC.1	• Remote controller sensor error

• When there is an error on the indoor unit:

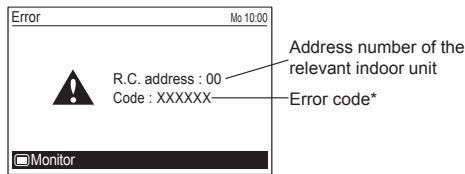

* The Error code (Er) contains a 2 digit number, a decimal point, followed by a 1 digit number.

Use the first 2 digits to confirm the details of the error as specified in the Installation manual of the indoor unit.

Ex) In case of "Er 51.2"
Er 51 → "Indoor unit fan motor1 error"

Error display			Wired remote controller Error code	Mode	DESCRIPTION
OPERATION lamp (green)	TIMER lamp (orange)	ECO lamp (green)			
●(5)	● (1)	◇	51	Indoor unit	Indoor unit fan motor1 error