

# Software Product Description

---

**PRODUCT NAME: DECnet-11M-PLUS, Version 3.0**  
**RSX-11M-PLUS Network Software**

**SPD 10.66.06**

## **DESCRIPTION**

DECnet-11M-PLUS allows a suitably configured RSX-11M-PLUS system to participate as a routing or nonrouting (end) node in DECnet computer networks. DECnet-11M-PLUS is a Phase IV network product and is warranted for use only with supported Phase III and Phase IV products supplied by DIGITAL.

DECnet Phase IV networks can contain up to 1023 nodes per network area given proper network planning. Phase III nodes participating in Phase III/IV networks are limited to the Phase III routing capability of 255 nodes. Phase II nodes are not supported.

DECnet-11M-PLUS offers task-to-task communications, utilities for network file operations, network command terminal support, and network resource-sharing capabilities using the DIGITAL Network Architecture (DNA) protocols. DECnet-11M-PLUS communicates with adjacent nodes over synchronous and asynchronous communication lines, Ethernet Local Area Networks (LANs), and parallel interfaces. Communications using X.25 circuits over selected Packet Switched Data Networks (PSDNs) is also possible. This requires DECnet-11M-PLUS to be configured with the RSX-11 PSI/M-PLUS product. Please refer to the RSX-11 PSI/M-PLUS SPD (SPD 10.43.xx) for further information. Access to DECnet-11M-PLUS is supported for RSX-11M-PLUS user programs written in MACRO-11, FORTRAN IV, FORTRAN-77, COBOL-81, and BASIC-PLUS-2.

The functions available to an RSX-11M-PLUS user depend, in part, on the configuration of the rest of the network. Each DECnet product offers its own level of functionality and its own set of features to the user. Networks consisting entirely of DECnet-11M-PLUS nodes can have the full functionality described in this SPD. Networks that mix DECnet-11M-PLUS nodes with other DECnet products can limit the functions available to the DECnet-11M-PLUS user because some DECnet-11M-PLUS features are not supported by all DECnet products. DECnet-11M-PLUS provides the same primary services on all systems; however, some supplied optional features require hardware configurations larger than the minimum supported systems.

The DECnet products and functions available to users on mixed networks can be determined by comparison of the SPDs for the component products.

### ***Adaptive Routing***

Adaptive routing is the mechanism by which one or more nodes in a network can route or forward messages between another pair of nodes in the same network. This routing capability will forward such messages even if no direct physical link exists between the pair of nodes apart from the sequence of physical links that includes the routing node(s).

**August 1985**

**BH-J513G-TC**

**digital**  
software

---

A DECnet-11M-PLUS node must function as a routing node whenever multiple lines are used simultaneously by that node. DECnet-11M-PLUS end nodes provide all the capabilities of DECnet-11M-PLUS routing nodes except that end nodes cannot route messages on behalf of other nodes in the network. Since end nodes do not route messages, they do not need to store or update routing databases. Consequently, end nodes use less system resource and generate less traffic than routing nodes.

For this same reason, end node operation consumes less processing power than routing node operation. The Full Function DECnet-11M-PLUS software must be installed on a node in order for that node to operate as a routing node. For a node to operate as an end node either the Full Function or the End Node DECnet-11M-PLUS software must be installed on that node. Full Function DECnet-11M-PLUS software allows a node to be set up as either a routing node or as an end node.

Although two adjacent routing nodes can be connected by more than a single physical link, messages will be sent over only one of the links. All other lines will serve as "hot standbys", such that the least cost path available between two nodes is the one that will be used for message traffic. A line cost parameter set by the system manager determines the line over which all messages will be sent from node to adjacent node.

In addition to adaptive routing, which all DECnet Phase IV implementations use, DECnet-11M-PLUS supports Area Routing. Area Routing is a method by which DECnet can send and route messages between the nodes in the same or different areas of the network. If the network manager chooses to separate the network into areas, up to 63 (Area 1 through Area 63), with up to 1023 nodes per area, may be defined. For single area networks, Area 1 is the default. Area-based DECnet networks are hierarchical networks and some restrictions apply to communications from nodes in one area to nodes in another. For example, Phase III nodes in area-based networks can communicate only with nodes within their own areas. Proper network planning is essential when using Area Routing or configuring large networks.

### ***RL02 Distribution***

A subset of DECnet-11M-PLUS is available on RL02 distribution media. The RL02 kit is a single disk distribution that requires no system generation. It must be installed with the pregenerated RSX-11M-PLUS system (with or without Data space) available on RL02 (Refer to the RSX-11M-PLUS SPD 14.70.xx). This DECnet-11M-PLUS subset supports end node operation, and is functionally equivalent to the end node that may be built using the standard full function or end node kit. Since it is a known configuration, the NETGEN is substantially faster.

### ***Task-To-Task Communication***

Using DECnet-11M-PLUS, an RSX-11M-PLUS user program written in MACRO-11 or one of the supported high level languages, can exchange messages with other network user programs. These two user programs can be on the same node, or on any other Phase IV node in the network, or Phase III node in the same area. The messages sent and received by the two user programs can be in any data format.

The DECnet-11M-PLUS software will optionally verify the access control privileges of a task requesting communication with a DECnet-11M-PLUS task. The RSX-11M-PLUS System Account File is used to determine access privileges. The results can either be passed on to the receiving task or used to reject the request by the network software.

## ***Network Resource Access***

### ***File Transfer Utilities***

Using DECnet-11M-PLUS utilities, a user can transfer sequential ASCII files between DECnet nodes. Files can be transferred in both directions between the locally supported RSX-11M-PLUS File Control System (FCS) devices and the file system of other DECnet nodes. Wild cards can be used for the user identification code, file name, file type and version number for local to remote file transfers. Transfer of other file types is supported, provided the source and destination DECnet systems support the same file type. Directory listings are also a supported DECnet-11M-PLUS feature.

The DECnet-11M-PLUS file transfer utilities support file transfers for both FCS and RMS files, where formats are compatible between the DECnet nodes.

Additional facilities allow system command files to be submitted to a remote node, where the list of commands is in a format acceptable to the node responsible for the execution. DECnet-11M-PLUS also allows RSX-11M-PLUS command files to be received from other systems and executed; optionally, support for batch files can be selected.

A utility is also provided with DECnet-11M-PLUS that allows the user to queue file operation requests for execution at a specified time. The user has the ability to monitor, list, and delete entries from this queue.

Network users must specify the appropriate user identification and password in order to access the files on a DECnet-11M-PLUS node. Access to local files using the DECnet software can be controlled through the RSX-11M-PLUS System Account File.

### ***File Access***

File access is supported to and from remote DECnet systems by explicit subroutine calls in the supported high level languages. READ, WRITE, OPEN, CLOSE, and DELETE operations can be initiated by local tasks for sequential and random access files residing on the local system or at remote DECnet systems. Other nodes supporting File Access can exercise this capability for files located on the RSX-11M-PLUS node. Fixed and variable length record formats are supported. Files accessed remotely can contain either ASCII or binary information.

Access to RMS file organizations from other DECnet products is supported by DECnet-11M-PLUS.

### ***Network Command Terminal***

DECnet-11M-PLUS supports DIGITAL's Terminal Services Architecture Command Terminal protocol (CTERM), giving the terminal user the ability to establish a virtual connection to remote Phase IV DECnet systems which provide similar support. This is particularly useful for doing remote program development, and allows terminal users on small application-oriented systems to utilize the resources of larger development-oriented systems. In addition, communication with DIGITAL's Local Area Transport (LAT) terminal server products is supported.

These protocol implementations make the user's terminal appear as if it were physically connected to the target system, whether local or remote, and the operator can use the standard system and network utilities supported by that system.

DECnet-11M-PLUS also provides a utility (RMT) that allows a terminal user to establish a virtual connection to other Phase III or Phase IV DECnet-RSX nodes.

DECnet-11M-PLUS also provides an unsupported utility (RVT) that allows a terminal user to establish a virtual connection to Phase III/IV DECnet-VAX systems. This utility is provided only as a courtesy from DIGITAL, with no implied support services offered, as is the case with other mentioned DECnet-11M-PLUS capabilities. **RMT and RVT are provided only for compatibility with previous DECnet releases and will not be included in future releases of DECnet-11M-PLUS.**

#### ***Down-Line System Loading***

Initial memory images for RSX-11S nodes in the network can be stored on RSX-11M-PLUS file system devices and loaded into nodes across point-to-point, multipoint (DMP/DMV only), and Ethernet links. Load requests can come from the local RSX-11M-PLUS operator or from the remote node. Generation of initial memory images of DECnet-11S systems for down-line loading is supported by RSX-11M-PLUS.

#### ***Upline Dumping***

Memory images of adjacent RSX-11S nodes connected by DECnet can be written onto a file on a DECnet-11M-PLUS system. This facility helps a programmer understand what may have caused the RSX-11S system to crash.

#### ***Down-Line Task Loading***

Programs to be executed on DECnet-11S nodes in the network can be stored on the DECnet-11M-PLUS system and loaded on request into DECnet-11S nodes. In addition, programs already executing on DECnet-11S nodes can be checkpointed to the host file system and later restored to main memory of the DECnet-11S node. These features simplify the operation of network systems that do not have mass storage devices.

#### ***Communications Servers***

DIGITAL offers several communications server products for the DECnet Phase IV network environment. These are standalone processor and/or software packages based upon the PDP-11/RSX architecture. Such servers include the DECnet Router Server and DECnet/SNA Gateways.

Network management, down-line system loading, and upline dumping of these servers is the same as that described for RSX-11S nodes in the preceding paragraphs. Consult the SPD of the server product in question for details regarding availability of support on RSX-11M-PLUS.

#### ***Network Management***

The Network Control Program (NCP) performs three primary functions: displaying statistical and error information, controlling network components, and testing network operation. These functions can be performed locally or executed at remote Phase III or Phase IV nodes that support this feature. In either case, the output resulting from a command can be directed to a local file or to the user's terminal.

An operator can display the status of DECnet activity at the local node and other Phase III or Phase IV nodes. The user can choose to display statistics related to both node and communication lines, including data on traffic and errors. The local console operator can also perform many network control functions such as loading and unloading DECnet components, starting and stopping lines, activating the local node, and down-line loading RSX-11S systems.

DECnet-11M-PLUS also provides local network event logging to the console device, a file, or a user written program. Logging of events to a remote node is also supported. The NCP utility can

be used to enable and disable the logging of specific events as well as to enable and disable the event logging facility.

**Communications**

DECnet-11M-PLUS supports the DIGITAL Data Communications Message Protocol (DDCMP) for full- or half-duplex transmission in point-to-point and multipoint operation using serial synchronous or asynchronous facilities. DDCMP provides error detection/correction and physical link management facilities. In addition, an auto-answer capability is provided if supported by the modem in use.

Multipoint and auto-answer function with EIA-type devices only. Parallel communication devices use special link protocols (not DDCMP) optimized for their characteristics.

The Ethernet bus interfaces, when used in conjunction with DIGITAL's Ethernet transceivers, or DELNI, allows DECnet-11M-PLUS to utilize Ethernet as a data link transmission medium.

RSX-11 PSI/M-PLUS is the software product that provides an interface to X.25 Packet Switched Data Networks (PSDNs). When RSX-11 PSI/M-PLUS is used in conjunction with DECnet-11M-PLUS, a PSDN can be used to transmit messages between DECnet nodes.

The maximum number of physical links that can be supported by a DECnet-11M-PLUS node is sixteen, depending on CPU, type of communications interface, and speed of interfaces.

A maximum of 32 X.25 virtual circuits (64 on a PDP-11/44 or 11/70 with I/D space executive) is supported when DECnet-11M-PLUS is used in conjunction with RSX-11 PSI/M-PLUS for DECnet communication through an X.25 PSDN. However, when the total number of DECnet circuits (Data Link Mapping and other) is greater than 24, the maximum node address supported is less than 1023 (#circuits \* maximum address <25,000).

DECnet-11M-PLUS multipoint will support up to a maximum of twelve tributaries on a single multipoint line. Aggregate bandwidth of tributaries is limited to that of the control station device. The communication path to each tributary counts as a link with respect to the limits on number of links specified above. Multipoint line configurations will be supported for the following devices:

**Multipoint Devices**

<b>Devices</b>	<b>Multipoint Control Station (Master)</b>	<b>Multipoint Tributary (Slave)</b>
DL11/DLV11	YES	YES
DUP11	YES	YES
DPV11	YES	YES
DZ11/DZV11/DZQ11	YES	NO
DHU11/DHV11	YES	NO
DV11	YES	YES
DMP11/DMV11*	YES	YES
KMC11 (DZ11)	YES	NO
KMC11 (DUP11)	YES	YES

\* Multipoint communication hardware device

**Direct Line Access**

User written MACRO-11 tasks will be provided with Direct Line Access (DLX) support to all supported devices (including Ethernet Controllers). DLX allows direct control of the communications lines, bypassing the logical link control and transport mechanism provided by the DECnet software. User programs are required on both ends of the link in order to use this interface.

**DECnet-11M-PLUS Configuration**

The process of configuring a DECnet-11M-PLUS node is based primarily on trade-offs of cost, performance, and functionality, within the realm of satisfying the user's application requirements. It can be readily expected that network applications will run the full gamut from low-speed, low-cost situations to those of relatively high performance and functionality. The performance of a given DECnet node is a function not only of the expected network traffic and resultant processing ("global" conditions), but also of the amount of concurrent processing specific to that node (local conditions). Thus, node performance depends on many factors, including:

- CPU type and Memory Size
- Number of device interrupts per unit time
- Communication line characteristics
- Number and size of buffers
- Message size and frequency of transmission
- Local applications
- Size and frequency of route-through traffic

Note that the rate at which user data can be transmitted (throughput) over a communications line may sometimes approach, but will never equal or exceed, the actual line speed. The reason is that the actual throughput is a function of many factors, such as the network application(s), topology, protocol overhead and line quality, as well as the factors cited at the beginning of this section.

Six basic groups of communications interfaces are presented in the tables below. They differ in many respects, particularly in their effect upon CPU utilization.

- With character interrupt devices such as the DUP11, CPU cycles are required for not only the line protocol processing such as DDCMP or the optional X.25 protocol, but also for each character sent and received.
- Devices such as the DHV11 are direct memory access (DMA) on transmit, and character interrupt on receive. While CPU cycles are consumed for line protocol processing, and for each character received, the load is reduced for messages transmitted.
- Devices such as the DV11 are direct memory access (DMA) for both transmission and reception. Since the line protocol (DDCMP) is in the PDP-11 software, CPU cycles are required for its processing.
- The DMR11, DMP11, DMV11, and KMS11 are DMA devices with the line protocol (DDCMP or X.25) executed in microcode, thus off-loading the PDP-11 CPU. The only DECnet load the processor sees is completed incoming and outgoing messages.
- The PCL11-B is a high speed DMA device which uses local parallel communications lines. It has its own line protocol and does not use DDCMP. CPU cycles are only required for processing of incoming and outgoing data messages and to perform control functions.
- The DEUNA, UNIBUS-to-Ethernet, and DEQNA, QBUS-to-Ethernet, controllers are high speed DMA devices supporting the CSMA/CD protocol. CPU cycles are only required for processing of incoming and outgoing messages.

The following tables describe the physical hardware configurations supported by DECnet-11M-PLUS in terms of CPU type and communication interface. The numbers given in the tables are "load costs". Maximum line speeds (the fastest clock rate at which the device can be driven under DECnet-11M-PLUS relative to the load cost), expressed in kilobits per second, are shown in parentheses.

Device loading provides a method by which one can compute a maximum system configuration for a variety of communications devices. The load cost indicates the maximum load that a device can put on a particular type of CPU. The load cost limit for each CPU type is 16.

For communications devices which support half/full duplex, the load costs in the tables are for full duplex configurations. The load cost for a half duplex configuration can be calculated as one half of the load cost in the table except at very low speeds, in which case the load cost is the same as in the full duplex case.

DECnet-11M-PLUS UNIBUS Device Load Table

Device Type	Processor Type			
	11/24	11/44	11/70	11/84
DEUNA (10meg)	16	16	16	16
PCL (4meg)	16	16	16	16
DMP (to 19.2K)	2	1	1	1
DMP (56K)	3	3	3	3
DMP (1meg)	16	16	16	16
DMR (to 19.2K)	2	1	1	1
DMR (56K)	4	3	3	3
DMR (1meg)	16	16	16	16
DV (to 9.6K)	4	3	3	3
DHU (to 9.6K)	2	2	2	2
DL (to 9.6K)	2	2	2	2
DU (to 9.6K)	2	2	2	2
DUP (to 9.6K)*	2	2	2	2
DZ (to 9.6K)	2	2	2	2

\* Maximum 4.8Kbps for 11/24 processor

**Note:** For processor types not shown, use the load costs associated with the PDP-11/24 to compute device loading



DECnet-11M-PLUS QBUS Device Load Table

Device Type	Processor Type		
	11/23	11/23-PLUS	11/73
DEQNA (10meg)	16	16	16
DMV (to 19.2K)	2	2	1
DMV (56K)	3	3	3
DHV (to 9.6K)	2	2	2
DLV (to 9.6K)	2	2	2
DPV (to 9.6K)	2	2	2
DUV (to 9.6K)	2	2	2
DZV (to 9.6K)	2	2	2

Maximum Line Configurations Guidelines  
 (Multipoint)

Maximum Line Speed  
 (Kilobits per Second, half- or full-duplex)

Device Group	19.2	56	250	500	1000
DMV11 (All Options)	2/8	2/8			
DMP11 (RS232-C, V.35) (local)	†4/8	2/8			
(RS422)	†4/8	2/8	1/12	1/12	1/12*

\* half-duplex

† 11/24 is limited to 2 controllers

**Note:** Left side of slash (/) indicates number of controllers per node and right side indicates total number of tributaries per control node.

Total number of circuits not to exceed 16 per node.

Number of tributaries on lines should be carefully configured for performance considerations.

In order to achieve a viable configuration, the user and/or a DIGITAL software specialist must perform a level of application analysis which addresses the factors above.

### MINIMUM HARDWARE REQUIRED

Any valid RSX-11M-PLUS system configuration with:

- The following additional memory must be available:

DECnet-11M-PLUS end node - 16KW

DECnet-11M-PLUS routing node - 18KW

DECnet-11M-PLUS end node with RSX-11 PSI/M-PLUS - 22KW

DECnet-11M-PLUS routing node with RSX-11 PSI/M-PLUS - 30KW

Ethernet support will add 3KW to the above memory requirements.

- The following additional number of disk blocks must be available for DECnet-11M-PLUS network software:

DECnet-11M-PLUS end node capability - 4000

DECnet-11M-PLUS full routing capability - 4500

DECnet-11M-PLUS end node with RSX-11 PSI/M-PLUS - 4500

DECnet-11M-PLUS routing node with RSX-11 PSI/M-PLUS - 5000

DECnet-11M-PLUS Pre-generated end node RL02 distribution - 2200

- PDP-11/24, PDP-11/44, PDP-11/70, or PDP-11/84 central processor with one of the following communications devices:

DUP11 low-speed synchronous interface<sup>5</sup>

DMP11 synchronous UNIBUS interface (RS232-C/RS423A, CCITT V.35/DDS, or RS449/RS422)<sup>5</sup>

DMP11 local synchronous UNIBUS interface<sup>5</sup>

DMR11 synchronous UNIBUS interface (RS232-C/RS423A, CCITT V.35/DDS, or RS449/RS422)<sup>5</sup>

DMR11 local synchronous UNIBUS interface<sup>5</sup>

DL11 asynchronous EIA interface with modem control<sup>5</sup>

DL11 asynchronous 20mA current loop interface<sup>1,5</sup>

DZ11 multiline asynchronous EIA interface <sup>2,5</sup>

DZ11 multiline asynchronous 20mA current loop interface. <sup>1,2,5</sup>

DHU11 multiline asynchronous interface <sup>2,5</sup>

DV11 multiline NPR synchronous interface<sup>2,5</sup>

DEUNA UNIBUS-to-Ethernet controller

PCL11-B multiple CPU link

KMS11-BD/E synchronous UNIBUS multiplexer<sup>3</sup>

- PDP-11/23 PLUS or Micro/PDP-11 central processor (11/23, 11/73) with one of the following communications devices. **(Note that the KDJ11-A 11/73 option is not supported.)**

DMV11 synchronous QBUS interface (RS232-C/RS423A or CCITT V.35/DDS)<sup>5</sup>

DMV11	local synchronous QBUS interface <sup>5</sup>
DLV11	asynchronous EIA interface with modem control <sup>5</sup>
DZV11	multiline asynchronous EIA interface <sup>2,5</sup>
DZQ11	multiline asynchronous QBUS EIA interface <sup>2,5</sup>
DHV11	multiline asynchronous interface <sup>2</sup>
DPV11	synchronous QBUS interface <sup>5</sup>
DEQNA	QBUS-to-Ethernet controller

#### **OPTIONAL HARDWARE**

- Additional lines and/or communication interfaces (from above) up to maximum as defined in Device Load tables for mapped systems.
- KG11-A Communications Arithmetic Element<sup>4</sup> (may be used in conjunction with DV11, DZ11, and DL11)
- KMC11-A (without the RSX-11 PSI/M-PLUS product, can be used in conjunction with up to eight DUP11s or one sixteen-line DZ11)

#### **NOTES:**

- (1) Requires either the H319 option for optical isolation or one side of the 20mA line to be in passive mode.
- (2) All lines on this interface must be dedicated as DECnet links.
- (3) Requires the RSX-11 PSI/M-PLUS product.
- (4) This product is no longer marketed by DIGITAL and may not be supported in future releases of DECnet-11M-PLUS.
- (5) With appropriate FCC-compliant cabinet option.

#### **PREREQUISITE SOFTWARE**

RSX-11M-PLUS Operating System

Refer to the RSX-11M-PLUS Optional Software Cross Reference Table (SPD 20.99.xx) for the required version.

#### **OPTIONAL SOFTWARE**

BASIC-PLUS-2 for RSX-11M-PLUS  
PDP-11 FORTRAN-77/RSX  
FORTRAN IV/RSX  
COBOL-81  
RSX-11 PSI/M-PLUS

#### **SOFTWARE WARRANTY**

Warranty for this software product is provided by DIGITAL with the purchase of a license for the product. There is no additional charge. This software product is warranted to conform to the Software Product Description (SPD). This means that DIGITAL will remedy any nonconformance when it is reported to DIGITAL by the customer during the warranty period.

The warranty period is ninety (90) days. It begins when the software is installed or thirty (30) days after delivery to the end user, whichever occurs first and expires ninety (90) days later. All warranty related support for this software will end 180 days after release of the subsequent version.

Warranty is provided in the country of purchase. DIGITAL will provide a service location which will accept reporting (in a format prescribed by DIGITAL) of a nonconformance problem caused when using the licensed software under normal conditions as defined by the SPD. DIGITAL will remedy a nonconformance problem in the current unaltered release of the licensed software by issuing correction information such as: correction documentation, corrected code, or notice of availability of corrected code; or a restriction or a bypass. The customer will be responsible for the preparation and submission of the problem report to the service location.

### **Warranty Exclusion**

DIGITAL DOES NOT WARRANT THAT THE SOFTWARE LICENSED TO CUSTOMER SHALL BE ERROR FREE, THAT THE SOFTWARE SHALL OPERATE WITH ANY HARDWARE AND SOFTWARE OTHER THAN AS SPECIFIED IN THIS SPD, THAT THE SOFTWARE SHALL SATISFY CUSTOMER'S OWN SPECIFIC REQUIREMENTS, OR THAT COPIES OF THE SOFTWARE OTHER THAN THOSE PROVIDED OR AUTHORIZED BY DIGITAL SHALL CONFORM TO THE SPD.

DIGITAL MAKES NO WARRANTIES WITH RESPECT TO THE FITNESS AND OPERABILITY OF MODIFICATIONS NOT MADE BY DIGITAL.

IF THE SOFTWARE FAILS TO FUNCTION FOR REASONS STATED ABOVE, THE CUSTOMER'S WARRANTY WILL BE INVALIDATED AND ALL SERVICE CALLS WILL BE BILLABLE AT THE PREVAILING PER CALL RATES.

### **INSTALLATION**

Only experienced customers should attempt installation of this product. DIGITAL recommends that all other customers purchase DIGITAL's Installation Services. These services provide for installation of the software product by an experienced DIGITAL Software Specialist.

DIGITAL's Installation Services can be purchased as a separate service.

### **Courtesy Installation Service**

This software product will be installed by DIGITAL at no additional charge if you purchase it concurrent with a Startup Service Package that includes installation service. Both the operating system and this product must be installed concurrently.

### **ORDERING INFORMATION**

Single-Use licensed software is furnished under the licensing provisions of DIGITAL's Standard Terms and Conditions of Sale, which provide in part that the software and any part thereof may be used on only the single CPU on which the software is first installed, and may be copied, in whole or in part (with the proper inclusion of DIGITAL's copyright notice and any proprietary notices on the software) for use on such CPU.

You will need a separate license for each CPU on which you will be using the software product (except as otherwise specified by DIGITAL). Then you will select the Materials and Service Options you need to utilize the product effectively. **IF YOU ARE ALREADY FAMILIAR WITH THESE OPTIONS, YOU MAY OBTAIN THE ORDERING INFORMATION DIRECTLY FROM THE SOFTWARE OPTIONS CHART.** In most cases, you will want to review the following descriptions to determine what options you require.

## **LICENSE OPTIONS**

### **Single-Use License Option**

The Single-Use License is your right to use the software product on a single CPU and it includes your 90 day warranty.

For your first installation of this software product you must purchase as a **minimum**:

- Single-Use License Option, and
- Distribution and Documentation Option

The license gives you the right to use the software on a single CPU and the Distribution and Documentation Option provides the machine-readable software and related documentation.

To use this software product on additional CPUs, you must purchase for each CPU as a **minimum**:

- Single-Use License Option

In addition to the right to use, the license gives you the one-time right to copy the software from your original CPU installation to the additional CPU. Therefore, the Distribution and Documentation Option is not required, but optional.

### **Migration Option**

Current licensed users of DECnet-11M are eligible for the migration option. This is a Single-Use License offered at a reduced price and provides all of the License rights described above.

For your first installation of this software product you must purchase as a **minimum**:

- Migration Option, and
- Distribution and Documentation Option

To use this software product on additional CPUs currently licensed for DECnet-11M, you must purchase for each CPU as a **minimum**:

- Migration Option

## **MATERIALS AND SERVICE OPTIONS**

### **Distribution and Documentation Option**

The Distribution and Documentation option provides the machine-readable software in binary form and the basic documentation. You must have, or order, a Single-Use License to obtain this option. You will need this option to install the software for the first time. When revised versions of this software product become available, they may also be obtained by purchasing this option again.

If you prefer to receive automatic distribution of revised versions for this product, you must purchase a Software Product Service Agreement.

### **Software Revision Right-To-Copy Option**

The Right-To-Copy Option allows a customer with multiple CPUs to copy a revised version of a software product from one CPU to another. Each CPU must be licensed for that product. You first install the revised software on one CPU; then you can make copies for additional CPUs by purchasing the Right-To-Copy Option for each additional CPU.

If you prefer to automatically obtain the right-to-copy, you must purchase a Service Right-to-Copy for each additional CPU; this is a service added to a Software Product Service Agreement.

#### **Documentation-Only Option**

You can obtain one copy of the basic documentation by purchasing the Documentation-Only Option.

#### **Installation Service Option**

DIGITAL's Installation Service is provided by a DIGITAL Software Specialist and accelerates your productive use of this product. For more information on what is included in this service, please obtain the appropriate Service Description from your local DIGITAL office.

Installation Service will be provided at no additional charge (Courtesy Installation) under the conditions described in the Installation section above.

For a fixed price, a DIGITAL Software Specialist will assure that the customer's system is ready for installation, install the software, and familiarize the customer with its operation.

Installation for DECnet-11M-PLUS will consist of the following:

- Verification that all components of DECnet-11M-PLUS have been received.
- Verification that the necessary versions of the RSX-11M-PLUS software and documentation are available.
- Verification of the appropriate sysgen parameters.

**Note:** Should a software specialist be required to modify the previously installed operation system parameters, a time and materials charge will apply.

- Install DECnet-11M-PLUS software
- Define and create a local node DECnet database
- Modify the system's start-up command procedure including starting up the DECnet-11M-PLUS network.
- Verify the proper installation of DECnet-11M-PLUS by running a series of tests to show connectivity (demonstrated by the use of the post-installation checkout procedure) to a designated node.

Connectivity to all other nodes within the network is the responsibility of the customer.

#### ***Pre-Installation Procedures Required***

Before DIGITAL can install the software, the customer must:

- Ensure that system meets the minimum hardware and software requirements (as specified in the SPD).
- Obtain, install and demonstrate as operational any modems and other equipment and facilities necessary to interface DIGITAL's communication equipment
- For multi-node networks, designate one adjacent node to verify installation/connectivity
- Make available for a reasonable period of time, as mutually agreed upon by DIGITAL and the customer, all hardware communication facilities and terminals that are to be used during installation

Delays caused by any failure to meet these responsibilities will be charged at the prevailing rate for time and materials.

### **Software Product Service Agreements**

DIGITAL offers licensed customers annual Software Product Service Agreements to maintain their software:

**DECsupport Service** is the most comprehensive level of service offering critical problem on-site assistance and scheduled preventative maintenance. You receive telephone support that gives you timely answers and solves most software problems. In addition, you get revised versions of the software and documentation, and system newsletters or dispatches.

**BASIC Service** is ideal for customers who have a staff whose experience and expertise enables them to analyze and communicate a software problem to DIGITAL remote support centers. You receive telephone support that gives you timely answers and solves most software problems. In addition, you get revised versions of the software and documentation, and system newsletters or dispatches.

**Self-Maintenance Service** is designed for customers who require revised versions of the software and documentation from DIGITAL. In addition, you get system newsletters or dispatches and may submit software performance questions.

A variety of service options may be added to an existing Software Product Service Agreement, such as service for multiple-like systems. Contact your DIGITAL representative for additional information and ordering details.

The Prerequisite Software, as specified by this SPD, must have the equivalent level Software Product Service.

For more information on what is included in these agreements, please obtain the appropriate Service Description from your local DIGITAL office.

### **Training From Educational Services**

To ensure customer success with DIGITAL products, Educational Services sells training for the installation, maintenance and/or management of DIGITAL software. Course formats vary from seminars to packaged training materials that include self-paced instruction and computer-based instruction to traditional lecture/labs at DIGITAL's worldwide Training Centers.

For a complete listing of course schedules and prices, refer to the DIGEST, Educational Services' quarterly publication. For curriculum-specific information, training recommendations and assistance in planning training programs, please contact your Educational Services Representative.

### **Professional Software Services**

DIGITAL Software Specialists are available on a per-call or resident contract basis to help in all phases of software development or implementation. Specialists are available to serve as technical consultants, decision support consultants or business systems analysts. Resources are available to:

- Supplement your programming staff
- Assume project management responsibility
- Develop software
- Augment a system start-up service package with tailored services to meet specific needs

Contact your DIGITAL representative for additional information and ordering details.

**SOFTWARE OPTIONS CHART**

The distribution Media Codes used in the Software Options Chart are described below. You specify the desired Media Code at the end of the Order Number, e.g., QJ766-HD = binaries on 9-Track 800 BPI Magtape (NRZI).

5 = TK50 Tape Cartridge

D = 9-Track 800 BPI magtape (NRZI)

H = RL02 Disk Cartridge\*

M = 9-track 1600 BPI Magtape (PE)

V = RK07 Disk Cartridge

Z = No hardware dependency

\* The RLO2 end node distribution is pregenerated and runs only with the RSX-11M-PLUS RL02 distribution kits.



	<b>ORDER NUMBER FULL FUNCTION</b>	<b>ORDER NUMBER END NODE</b>
<b>LICENSE OPTIONS: A LICENSE IS REQUIRED FOR EACH CPU.</b>		
Single-use license	QJ766-UZ	QJ767-UZ
<b>MATERIALS AND SERVICE OPTIONS:</b>		
Distribution and Documentation Option	QJ766-H5 QJ766-HD QJ766-HH QJ766-HM QJ766-HV	QJ767-H5 QJ767-HD QJ767-HH QJ767-HM QJ767-HV
Software Revision Right-to-Copy Option	QJ766-HZ	QJ767-HZ
Documentation Only kit	QJ766-GZ	QJ767-GZ
Installation Service Option	QJ766-I5 QJ766-ID QJ766-IH QJ766-IM QJ766-IV	QJ767-I5 QJ767-ID QJ767-IH QJ767-IM QJ767-IV
DECsupport Service	QJ766-95 QJ766-9D QJ766-9H QJ766-9M QJ766-9V	QJ767-95 QJ767-9D QJ767-9H QJ767-9M QJ767-9V
Basic Service	QJ766-85 QJ766-8D QJ766-8H QJ766-8M QJ766-8V	QJ767-85 QJ767-8D QJ767-8H QJ767-8M QJ767-8V
Self-Maintenance Service	QJ766-35 QJ766-3D QJ766-3H QJ766-3M QJ766-3V	QJ767-35 QJ767-3D QJ767-3H QJ767-3M QJ767-3V