

# Chapter

# 21

## Data Communications

This chapter tells you everything you need to know to transfer programs between the CASIO Power Graphic unit and another CASIO Power Graphic unit, connected with an optionally available SB-62 cable. To transfer data between a unit and a personal computer, you will need to purchase the separately available CASIO FA-123 Interface Unit.

This chapter also contains information on how to use the optional SB-62 cable to connect to a CASIO Label Printer to transfer screen data for printing.

- 21-1 Connecting Two Units**
- 21-2 Connecting the Unit with a Personal Computer**
- 21-3 Connecting the Unit with a CASIO Label Printer**
- 21-4 Before Performing a Data Communication Operation**
- 21-5 Performing a Data Transfer Operation**
- 21-6 Screen Send Function**
- 21-7 Data Communications Precautions**


## 21-1 Connecting Two Units

---

The following procedure describes how to connect two units with an optional SB-62 connecting cable for transfer of programs between them.

### ●To connect two units

1. Check to make sure that the power of both units is off.
2. Remove the covers from the connectors of the two units.
  - Be sure you keep the connector covers in a safe place so you can replace them after you finish your data communications.
3. Connect the two units using the SB-62 cable.

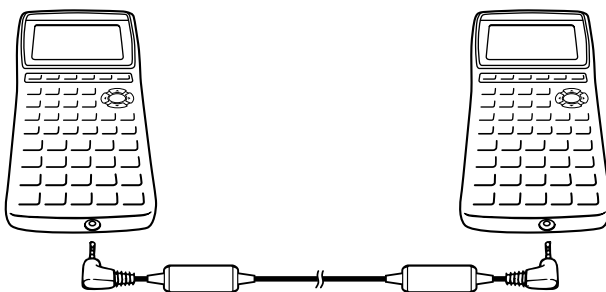

SB-62 cable



- • Keep the connectors covered when you are not using them.

## 21-2 Connecting the Unit with a Personal Computer

---


To transfer data between the unit and a personal computer, you must connect them through a separately available CASIO FA-123 connection cable.

For details on operation, the types of computer that can be connected, and hardware limitations, see the user's manual that comes with the FA-123.

Some types of data may not be able to be exchanged with a personal computer.

### ●To connect the unit with a personal computer

1. Check to make sure that the power of the unit and the personal computer is off.
2. Connect the FA-123 connection cable to the personal computer.
3. Remove the cover from the connector of the unit.
  - Be sure you keep the connector cover in a safe place so you can replace it after you finish your data communications.
4. Connect the FA-123 connection cable to the unit.
5. Turn on the power of the unit, followed by the personal computer.
  - After you finish data communications, turn off power in the sequence: the unit first, and then the personal computer. Finally, disconnect the equipment.

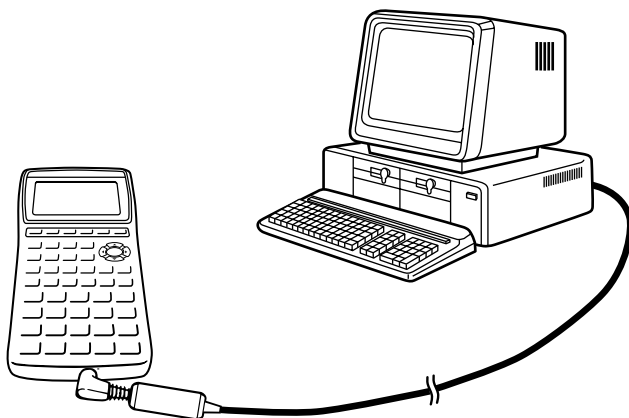

## 21-3 Connecting the Unit with a CASIO Label Printer


---

After you connect the unit to a CASIO Label Printer with an optional SB-62 cable, you can use the Label Printer to print screen shot data from the unit. See the user's guide that comes with your Label Printer for details on how to perform this operation.

- The operation described above can be performed using the following Label Printer models: KL-2000, KL-2700, KL-8200, KL-8700, KL-8800 (as of April 2001).

### ●To connect the unit with a Label Printer

1. Check to make sure that the power of the unit and the Label Printer is off.
2. Connect the optional SB-62 cable to the Label Printer.
3. Remove the cover from the connector of the unit.
  - Be sure you keep the connector cover in a safe place so you can replace it after you finish your data communications.
4. Connect the other end of the SB-62 cable to the unit.
5. Turn on the power of the unit, followed by the Label Printer.

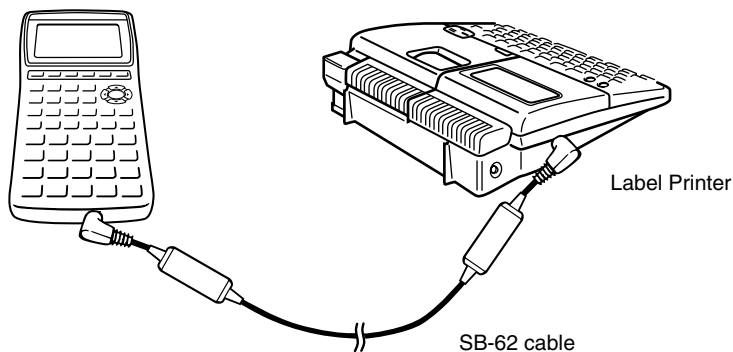

- After you finish data communications, turn off power in the sequence: the unit first, and then the Label Printer. Finally, disconnect the equipment.

## 21-4 Before Performing a Data Communication Operation

In the Main Menu, select the **LINK** icon and enter the LINK Mode. The following data communication main menu appears on the display.

```
Communication
Image Set:Off
F1:Transmit
F2:Receive
F6:Image Set Mode
TRAN RECV IMGE
```



P.408



CFX

fx-9750G  
PLUS

Image Set: ..... Indicates the status of the graphic image send features.

Off: Graphic images not sent.

Monochrome: Pressing **F-D** sends graphic images in monochrome.

Color: Pressing **F-D** sends graphic images in color.  
Do not select "**Color**" for Image Set to send data to a Label Printer.

On: Pressing **F-D** sends graphic images in monochrome.

- **{TRAN}/{RECV}** ... menu of {send settings}/{receive settings}
- **{IMGE}** ... {menu of graphic image transfer settings}

Communication parameters are fixed at the following settings.


- Speed (BPS): 9600 bits per second
- Parity (PARITY): NONE

## 21-5 Performing a Data Transfer Operation

Connect the two units and then perform the following procedures.

### Receiving unit

To set up the calculator to receive data, press **F2** (RECV) while the data communication main menu is displayed.

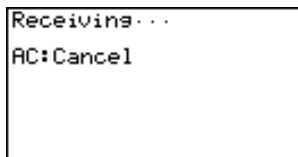

The calculator enters a data receive standby mode and waits for data to arrive. Actual data receive starts as soon as data is sent from the sending unit.

### Sending unit

To set up the calculator to send data, press **F1** (TRAN) while the data communication main menu is displayed.



Press the function key that corresponds to the type of data you want to send.



- **{SEL}** ... {selects data items and sends them}
- **{CRNT}** ... {selects data items from among previously selected data items and sends them}
- **{BACK}** ... {all memory contents, including mode settings}

### ●To send selected data items

Press **F1** (SEL) or **F2** (CRNT) to display a data item selection screen.



- **{SEL}** ... {selects data item where cursor is located}
- **{TRAN}** ... {sends selected data items}

Use the  and  cursor keys to move the cursor to the data item you want to select and press **[F1]** (SEL) to select it. Currently selected data items are marked with "►". Pressing **[F6]** (TRAN) sends all the selected data items.

- To deselect a data item, move the cursor to it and press **[F1]** (SEL) again.

Only items that contain data appear on the data item selection screen. If there are too many data items to fit on a single screen, the list scrolls when you move the cursor to the bottom line of the items on the screen.

The following types of data items can be sent.

Data Item	Contents	Overwrite Check* <sup>1</sup>	Password Check* <sup>2</sup>
Program	Program contents	Yes	Yes
Mat <i>n</i>	Matrix memory (A to Z) contents	Yes	
List <i>n</i>	List memory (1 to 6) contents	Yes	
File <i>n</i>	List file memory (1 to 6) contents	Yes	
Y=Data	Graph expressions, graph write/non-write status, View Window contents, zoom factors	No	
G-Mem <i>n</i>	Graph memory (1 to 6) contents	Yes	
V-Win <i>n</i>	View Window memory contents	No	
Picture <i>n</i>	Picture (graph) memory (1 to 6) data	No	
DynaMem	Dynamic Graph functions	Yes	
Equation	Equation calculation coefficient values	No	
Variable	Variable assignments	No	
F-Mem	Function memory (1 to 6) contents	No	

\*<sup>1</sup> No overwrite check: If the receiving unit already contains the same type of data, the existing data is overwritten with the new data.

With overwrite check: If the receiving unit already contains the same type of data, a message appears to ask if the existing data should be overwritten with the new data.

Data item name —

```

[AA ]
Already Exists
Overwrite?
F1:Yes
F6:No
AC:Cancel
[YES] [NO]

```

- {YES} ... {replaces the receiving unit's existing data with the new data}
- {NO} ... {skips to next data item}

\*2 With password check: If a file is password protected, a message appears asking for input of the password.

Name of password protected file —

Password input field —

```

Program Name
[AA ]
Password?
[ ]
[SYBL]

```

- {SYBL} ... {symbol input}

After inputting the password, press **[EXE]**.

### ●To execute a send operation

After selecting the data items to send, press **[F6]** (TRAN). A message appears to confirm that you want to execute the send operation.

```

Transmit OK?
F1:Yes
F6:No
[YES] [NO]

```

- {YES} ... {sends data}
- {NO} ... {returns to data selection screen}

Press **[F1]** (YES) to send the data.

```


Transmitting...
AC:Cancel

```

- You can interrupt a data operation at any time by pressing **[AC]**.



The following shows what the displays of the sending and receiving units look like after the data communication operation is complete.

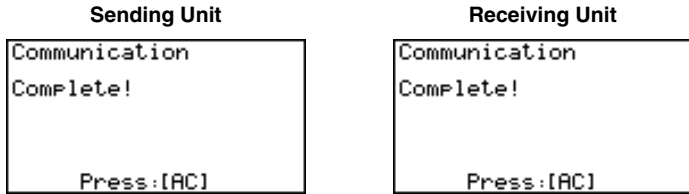


Press **[AC]** to return to the data communication main menu.


**•To send backup data**

This operation allows you to send all memory contents, including mode settings.


While the send data type selection menu is on the screen, press **[F6]** (BACK), and the back up send menu shown below appears.



Press **[F6]** (TRAN) to start the send operation.



The following shows what the displays of the sending and receiving units look like after the data communication operation is complete.

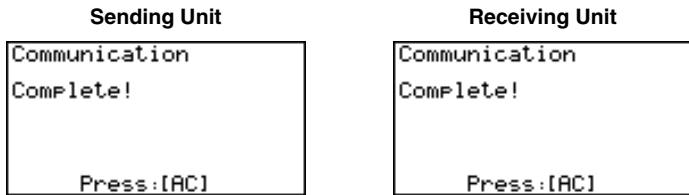

Press **[AC]** to return to the data communication main menu.



- Data can become corrupted, necessitating a RESET of the receiving unit, should the connecting cable become disconnected during data transfer. Make sure that the cable is securely connected to both units before performing any data communication operation.

## 21-6 Screen Send Function

The following procedure sends a bit mapped screen shot of the display to a connected computer.



P.402

### ●To send the screen

1. Connect the unit to a personal computer or to a CASIO Label Printer.
2. In the data communication main menu, press **[F6]** (IMGE) and the following display appears.

```
Image Set Mode
F1:Off
F2:Monochrome
F3:Color
[F-D]Key:Copy
[OFF]MONO|COLR
```

\* The above shows the CFX-9850 GB PLUS screen.



- {OFF} ... {graphic images not sent}
- {MONO}/{COLR} ... {monochrome}/{color} bitmap
- {ON} ... bitmap



3. Press a function key to specify either “Monochrome” or “Color” for the Image Set Mode.
4. Display the screen you want to send.
5. Set up the personal computer or Label Printer to receive data. When the other unit is ready to receive, press **[F-D]** to start the send operation.



P.403



- Selecting “Monochrome” for Image Set allows data to be sent to any CASIO Label Printer equipped with data communications capabilities.
- Selecting “Color” allows data to be sent to Color Label Printer models only.

You cannot send the following types of screens to a computer.

- The screen that appears while a data communication operation is in progress.
- A screen that appears while a calculation is in progress.
- The screen that appears following the reset operation.
- The low battery message.



- The flashing cursor is not included in the screen image that is sent from the unit.
- If you send a screen shot of any of the screens that appear during the data send operation, you will not be able to then use the sent screen to proceed with the data send operation. You must exit the data send operation that produced the screen you sent and restart the send operation before you can send additional data.
- You cannot use 6mm wide tape to print a screen shot of a graph.

## 21-7 Data Communications Precautions

---

Note the following precautions whenever you perform data communications.

- An error occurs whenever you try to send data to a receiving unit that is not yet standing by to receive data. When this happens, press **[AC]** to clear the error and try again, after setting up the receiving unit to receive data.
- An error occurs whenever the receiving unit does not receive any data approximately six minutes after it is set up to receive data. When this happens, press **[AC]** to clear the error.
- An error occurs during data communications if the cable becomes disconnected, if the parameters of the two units do not match, or if any other communications problem occurs. When this happens, press **[AC]** to clear the error and correct the problem before trying data communications again. If data communications are interrupted by **[AC]** key operation or an error, any data successfully received up the interruption will be in the memory of the receiving unit.
- An error occurs if the receiving unit memory becomes full during data communications. When this happens, press **[AC]** to clear the error and delete unneeded data from the receiving unit to make room for the new data, and then try again.
- To send picture (graph) memory data, the receiving unit need 1-kbytes of memory for use as a work area in addition to the data being received.

